PEUGEOT ETC Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	ETC
1007	1007 (CAN)	•
1007	1007 (VAN)	•
2008	, ,	•
206	206	•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	•
207	207 (VAN)	•
208	208	•
208	208 (Ai91)	•
3008	3008	•
3008	3008 (CHINA)	
3008	3008 (Hybrid4)	
301	3000 (HybHu4)	•
307	307 (CAN) (2006.01 -)	•
307	307 (CAN) (2000.01 -)	•
308	308 (2010.01 - 2014.09)	
308	308 (4 Doors)	
		•
308	308 (S)	
308	308 (T9) (2014.10 -)	
406	406 (R Coupe)	•
406	406 (R)	•
407	100 (0010 01 001100)	•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
607	607 (VAN)	•
806		•
807	807 (CAN) (2005 -)	•
807	807 (VAN) (2002 - 2005)	•
EXPERT	EXPERT (1)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
HOGGAR		•
PARTNER	PARTNER (2)	•
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•

PEUGEOT ETC Function List (Note:For reference only)

Initialisation Of The EGR Throttle

Initialising The Autoadaptives

Motorised Throttle Unit

Replacement Of Exhaust Gas Recycling Electric Throttle

Throttle Learning

PEUGEOT INJ Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	INJ
2008		•
207	207 (+)	•
207	207 (CAN)	•
208	208	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (T9) (2014.10 -)	•
4007	4007	•
4008	4008	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BOXER	BOXER (3) (Euro 5 / 6)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (KO)	•
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•
RCZ		•
TRAVELLER		•

PEUGEOT INJ Function List (Note:For reference only)

Classification Of Injector

Configuration Of The Characterisation Of Diesel Injector

Diesel Injectors Programming Procedure

Initialisation Of Diesel Injector

Injector Replacement

In jectors

Reinitialisation Following Replacement Of The Urea Injector

Replacement Of Injector

Replacement Of One Or More Petrol Injectors

Replacement Of One Or Several Injectors

Replacement Of The Cyliner Head Or Programming Of The Injectors

PEUGEOT OIL Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	OIL
2008	model type	•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	•
207	207 (VAN)	•
208	208	•
208	208 (Ai91)	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
301		•
307	307 (CAN) (2006.01 -)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
4007	4007	•
4008	4008	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BIPPER		•
BOXER	BOXER (3) (Euro 5 / 6)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
HOGGAR		•
ION		•
PARTNER	PARTNER (2)	•
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•
PARTNER	PARTNER Electric (B9E)	•
RCZ		•

PEUGEOT OIL Function List (Note:For reference only)

Configuration Of A New Maintenance Plan

Maintenance Indicator

Maintenance Indicator Reset

Maintenance Limit

Maintenance Mileage Zero Reset + Maintenance Number

Maintenance Number Zero Reset

Maintenance Number Zero Reset Carried Out

Oil Parameter Reinitialisation

Replacement Of The Engine Oil

Reset Service

Zeroing Of The Service Indicator

PEUGEOT SAS Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	SAS
1007	1007 (CAN)	•
1007	1007 (VAN)	•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	•
207	207 (VAN)	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
307	307 (VAN) (- 2005.12)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
308	308 (TX9)	•
4007	4007	•
4008	4008	•
4008	4008 (CHINA)	•
407	, , ,	•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BIPPER	, , ,	•
BOXER	BOXER (3)	•
BOXER	BOXER (3) (MiniBus)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (KO)	•
HOGGAR		•
ION		•
PARTNER	PARTNER (2)	•
PARTNER	PARTNER (B9)	•
PARTNER	PARTNER Electric (B9E)	•
RCZ	. ,	•

PEUGEOT SAS Function List (Note:For reference only)

Calibration Of The Steering Wheel Angle Sensor

Calibration Of The Yaw Speed Sensor

Calibration/Decalibration Of The Steering Wheel Angle Sensor

Longitudinal Acceleration Sensor Calibration

Steering Wheel Angle Sensor Programming

PEUGEOT BLD Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

	e new feature in this version.	BLD
Model	Model Type	·
1007	1007 (CAN)	•
1007	1007 (VAN)	•
2008	1000 (1)	•
206	206 (+)	•
206	206 (Mux)	•
207	207 (+)	•
207	207 (CAN)	•
207	207 (i)	•
207	207 (VAN)	•
208	208	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
307	307 (VAN) (- 2005.12)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
308	308 (TX9)	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BOXER	BOXER (3)	•
BOXER	BOXER (3) (MiniBus)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (KO)	•
HOGGAR		•
PARTNER	PARTNER (2)	•
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•
PARTNER	PARTNER Electric (B9E)	•
RCZ		•
TRAVELLER		•
(* LLLL!)	I	

PEUGEOT BLD Function List (Note:For reference only)

Bleeding

Bleeding Of The Hydraulic Block

Bleeding Of The Hydraulic Block ABS MK100

Bleeding Of The Hydraulic Block ASR8.0

Bleeding Of The Hydraulic Block ESP MK100

Bleeding Of The Hydraulic Circuit

PEUGEOT BMS Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Mode1	Model Type	BMS
2008		•
207	207 (+)	•
207	207 (CAN)	•
208	208	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
308	308 (TX9)	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (K0)	•
PARTNER	PARTNER (B9)	•
PARTNER	PARTNER Electric (B9E)	•
RCZ		•
TRAVELLER		•

PEUGEOT BMS Function List (Note:For reference only)

Manual Configuration

PEUGEOT Diagnostic Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- \bigcirc This function is not supported.
- ▲ This function is the new feature in this version.

Mode1	Model Type	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData	Act
1007	1007 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (CAN)	AC (Air Conditioning)	•	•	•	•	•
1007	1007 (CAN)	Alarm	•	•	•	•	•
1007	1007 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
1007	1007 (CAN)	CD (CD Player)	•	•	•	•	•
1007	1007 (CAN)	ECM (Engine Control Module)	•	•	•	•	•
1007	1007 (CAN)	EPS (Electric Power Steering)	•	•	•	•	•
1007	1007 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
1007	1007 (CAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
1007	1007 (CAN)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
1007	1007 (CAN)	MULD (Multifunction Display)	•	•	•	•	•
1007	1007 (CAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
1007	1007 (CAN)	Radio	•	•	•	•	•
1007	1007 (CAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (CAN)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
1007	1007 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (CAN)	TCM (Automatic Gearbox)	•	•	•	•	•
1007	1007 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
1007	1007 (CAN)	UID (Under Inflation Detection)	•	•	•	•	•
1007	1007 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
1007	1007 (VAN)	AC (Air Conditioning)	•	•	•	•	•
1007	1007 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
1007	1007 (VAN)	CD (CD Player)	•	•	•	•	•
1007	1007 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
1007	1007 (VAN)	EPS (Electric Power Steering GEP)	•	•	•	•	•
1007	1007 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
1007	1007 (VAN)	MULD (Multifunction Display)	•	•	•	•	•
1007	1007 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
1007	1007 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
1007	1007 (VAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
1007	1007 (VAN)	Radio	•	•	•	•	•
1007	1007 (VAN)	SRS (Airbag)	•	•	•	•	•
1007	1007 (VAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
1007	1007 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
107		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
107		CAS (Coded Anti-start)	•	•	•	•	•
107		ECM (Engine Control Module)	•	•	•	•	•
107		EPS (Electric Power Steering GEP)	•	•	•	•	•
107		Radio	•	•	•	•	•
107		SRS (Airbag)	•	•	•	•	•
107		TCM (Automatic Gearbox)	•	•	•	•	•
108		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
108		AC (Air Conditioning)	•	•	•	•	•
108		ECM (Engine Control Module)	•	•	•	•	•
108		EPS (Electric Power Steering)	•	•	•	•	•
108		IMMO/HFSM (Engine Immobiliser\Hands Free Starting Access Electric Module)	•	•	•	•	•
108		IP (Instrument Cluster Panel)	•	•	•	•	•
108		MULC/RD (Multifunction Video Camera And Remote Detection By Laser	•	•	•	•	•
108		Assembly) MULS (Multifunction Screen)	•	•	•	•	•
108		SRS (Airbag)		•	•	•	•
108		SSC (Stop And Start Control ECU)	•	•	•	•	•
	<u>i</u>	(>p ima ovar o constor boo)				_	

	1	I (_		
108		TCM (Automatic Gearbox)	•	•	•	•	•
2008		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
2008		AC (Air Conditioning)	•	•	•	•	•
2008		AMP (Audio Amplifier)	•	•	•	•	•
2008		Alarm	•	•	•	•	•
2008		BATT (Battery Charge Status Unit)	•	•	•	•	•
2008		BSI (Built-in Systems Interface)	•	•	•	•	•
2008		CD (External CD Player)	•	•	•	•	•
2008		ECM (Engine Control Module)	•	•	•	•	•
2008		EPS (Electric Power Steering)	•	•	•	•	•
2008		ESL (Electric Steering Lock)	•	•	•	•	•
2008		IP (Instrument Cluster Panel)	•	•	•	•	•
2008		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
2008		MCP (Multiplexed Control Panel)	•	•	•	•	•
2008		MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
2008		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
		System)		1			
2008		PAM (Parking Assistance)	•	•	•	•	•
2008		RBS (Rain And Brightness Sensor)	•	•	•	•	•
2008		Radio	•	•	•	•	•
2008		SM (Services Module)	•	•	•	•	•
2008		SRS (Airbag)	•	•	•	•	•
2008		SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
2008		SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
2008		Siren	•	•	•	•	•
2008		TCM (Automatic Gearbox)	•	•	•	•	•
2008		TRU (Trailer Relay Unit)	•	•	•	•	•
2008		VRD (Voltage Retaining Device)	•	•	•	•	•
206	206	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
206	206	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206	AC (Air Conditioning)	•	•	•	•	•
206	206	Alarm	•	•	•	•	•
206	206	BSI (Built-in Systems Interface)	•	•	•	•	•
206	206	CD (CD Player)	•	•	•	•	•
206	206	DAF (Diesel Additive Control Unit)	•	•	•	•	
206	206	DSM (Driver's School Module)	•	•	•	•	•
206	206	Display/Telematics	_	 •		•	
206	206	ECM (Engine Control Module)	•	+ -		•	
	206	EPS (Electric Power Steering GEP)	•	+ -		•	
206			•	 •	•		-
206	206	EPS (Electric Power Steering)		<u> </u>		•	•
206	206	ERF (Electric Retractable Roof)	•	•	•	•	•
206	206	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206	MULD (Multifunction Display)	•	•	•	•	•
206	206	MULS (Multifunction Screen)	•	•	•	•	-
206	206	NAVI (On-board Navigation System)	•	•	•	•	•
206	206	RBS (Rain And Brightness Sensor)	•	•	•	•	•
206	206	Radio	•	•	•	•	•
206	206	SM (Services Module)	•	•	•	•	•
206	206	SRS (Airbag)	•	•	•	•	•
206	206	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
206	206	TCM (Automatic Gearbox)	•	•	•	•	•
206	206 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206 (+)	AC (Air Conditioning)	•	•	•	•	•
206	206 (+)	Alarm	•	•	•	•	•
206	206 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
206	206 (+)	CD (CD Player)	•	•	•	•	•
206	206 (+)	Display/Telematics	•	•	•	•	•
206	206 (+)	ECM (Engine Control Module)	•	•	•	•	•
206	206 (+)	EPS (Electric Power Steering)	•	•	•	•	•
206	206 (+)	IP (Instrument Cluster Panel)	•	•	•	•	•
206	206 (+)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
206	206 (+)	Radio	•	•	•	•	•
200	200 (1)	amaz v					

206	206 (+)	SM (Services Module)	•	•	•	•	•
206	206 (+)	SRS (Airbag)	 •	•	•	•	•
206	206 (+)	SWSM (Steering Wheel Switching Module)	 •	•	•	•	•
206	206 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
206	206 (Mux)	ABS (Anti-lock brake System TEVES)	•	•	•	•	•
206	206 (Mux)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
206	206 (Mux)	AC (Air Conditioning)	—	•	•	•	•
206	206 (Mux)	Alarm	•	•	•	•	•
206	206 (Mux)	BSI (Built-in Systems Interface)	•		•	•	
206	206 (Mux)	CD (CD Player)	 •	—	•	•	•
206	206 (Mux)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
206	206 (Mux)	DSM (Driver's School Module)	•	•	•	•	
206	206 (Mux)	ECM (Engine Control Module)	+ -	•	•	•	
206	206 (Mux)	EPS (Electric Power Steering GEP)	 •		•	•	
206	206 (Mux)	ERF (Electric Retractable Roof)	 •	•	•	•	•
206	206 (Mux)	IP (Instrument Cluster Panel)		•	•	•	•
	206 (Mux)		 •		•	•	•
206		MULD (Multifunction Display)	 •	•	•	•	•
206	206 (Mux)	RBS (Rain And Brightness Sensor)	+ -			_	
206	206 (Mux)	Radio	•	•	•	•	•
206	206 (Mux)	SRS (Airbag)	•	•	•	•	•
206	206 (Mux)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (+)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (+)	AC (Air Conditioning)	•	•	•	•	-
207	207 (+)	ALM (Anti-theft Alarm)	•	•	•	•	•
207	207 (+)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (+)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (+)	CD (CD Player)	•	•	•	•	•
207	207 (+)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
207	207 (+)	DHL (Directional Headlamps)	•	•	•	•	•
207	207 (+)	DSM (Driver's School Module)	•	•	•	•	•
207	207 (+)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (+)	EPS (Electric Power Steering)	•	•	•	•	•
207	207 (+)	FR (Folding Roof)	•	•	•	•	•
207	207 (+)	HFC (Hands Free Control Kit)	•	•	•	•	•
207	207 (+)	HFR (High Frequency Receiver)	•	•	•	•	•
207	207 (+)	IP (Instrument Cluster Panel)	•	•	•	•	•
207	207 (+)	MULD (Multifunction Display)	•	•	•	•	•
207	207 (+)	PAM (Parking Assistance)	•	•	•	•	•
207	207 (+)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (+)	ROR (Radio Or Radiotelephone(Radio Part))	•	•	•	•	•
207	207 (+)	SB (Seat Belts Not Fastened LED Unit)	•	•	•	•	•
207	207 (+)	SM (Services Module)	•	•	•	•	•
207	207 (+)	SRS (Airbag)	•	•	•	•	•
207	207 (+)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
207	207 (+)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (+)	TEU (Telematics Unit)	•	•	•	•	•
207	207 (+)	UID (Under Inflation Detection)	•	•	•	•	•
207	207 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (CAN)	AC (Air Conditioning)	•	•	•	•	•
207	207 (CAN)	Alarm	•	•	•	•	•
207	207 (CAN)	BATT (Battery Charge Status Unit)	•	•	•	•	•
207	207 (CAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (CAN)	CD (CD Player)	 •	•	•	•	•
207	207 (CAN)	DHL (Directional Headlamps)		•	•	•	•
207	207 (CAN)	DSM (Driver's School Module)	 •		•	•	•
	207 (CAN) 207 (CAN)		•	-	•	•	•
207		ECM (Engine Control Module)	-	-	•	•	_
207	207 (CAN)	EPS (Electric Power Steering)	<u> </u>	<u> </u>		_	•
207	207 (CAN)	FR (Folding Roof)	•	•	•	•	
207	207 (CAN)	HFC (Hands Free Control Kit)	•	•	•	•	•
207	207 (CAN)	HFR (High Frequency Receiver)	•	•	•	•	•
207	207 (CAN)	IP (Instrument Cluster Panel)	•			•	

207	207 (CAN)	MAAP (Multiplexed Additive Adding Pump)		Ι	•	•	•
207	207 (CAN)	MULS (Multifunction Screen)	 			•	
207	207 (CAN)	N-TNB (Not Fastened Warning Light(Tnb))		•	•	•	•
207	207 (CAN)	PAM (Parking Assistance)			•	•	•
207	207 (CAN)	RBS (Rain And Brightness Sensor)				•	•
207	207 (CAN)	Radio	 	•	•	•	•
207	207 (CAN)	SM (Services Module)		•		•	
207	207 (CAN)	SRS (Airbag)		-		•	
207	207 (CAN)	SWSM (Steering Wheel Switching Module)		•	•	•	
207	207 (CAN)	TCM (Automatic Gearbox)		•			
207	207 (CAN)	TEU (Telematics Unit)		•	•	•	
207	207 (CAN)	UID (Under Inflation Detection)		•	•	•	
207	207 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)		•	•	•	•
207	207 (VAN)	AC (Air Conditioning)	 	•		•	•
207	207 (VAN)	Alarm	—	•	•	•	•
207	207 (VAN)	BSI (Built-in Systems Interface)		•	•	•	•
207	207 (VAN)	CD (CD Player)		 		•	•
207	207 (VAN)	ECM (Engine Control Module)				•	•
		· ·				•	•
207	207 (VAN)	IP (Instrument Cluster Panel)				•	•
207	207 (VAN)	MULD (Multifunction Display)		 			•
207	207 (VAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (VAN)	Radio	•	•	•	•	•
207	207 (VAN)	SM (Services Module)	•	•	•	•	•
207	207 (VAN)	SRS (Airbag)	•	•	•	•	•
207	207 (VAN)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
207	207 (VAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
207	207 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (VAN)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
207	207 (i)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
207	207 (i)	AC (Air Conditioning)	•	•	•	•	•
207	207 (i)	Alarm	•	•	•	•	•
207	207 (i)	BSI (Built-in Systems Interface)	•	•	•	•	•
207	207 (i)	CD (CD Player)	•	•	•	•	•
207	207 (i)	Display/Telematics	•	•	•	•	•
207	207 (i)	ECM (Engine Control Module)	•	•	•	•	•
207	207 (i)	IP (Instrument Cluster Panel)	•	•	•	•	•
207	207 (i)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
207	207 (i)	Radio	•	•	•	•	•
207	207 (i)	SM (Services Module)	•	•	•	•	•
207	207 (i)	SRS (Airbag)	•	•	•	•	•
207	207 (i)	SVLCU (Stolen Vehicle Location Control)	•	•	•	•	•
207	207 (i)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
207	207 (i)	TCM (Automatic Gearbox)	•	•	•	•	•
207	207 (i)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
208	208	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
208	208	AC (Air Conditioning)	•	•	•	•	•
208	208	ALM (Anti-theft Alarm)	•	•	•	•	•
208	208	AMP (Audio Amplifier)	•	•	•	•	•
208	208	BATT (Battery Charge Status Unit)	•	•	•	•	•
208	208	BSI (Built-in Systems Interface)	•	•	•	•	•
208	208	CD (CD Player)	•	•	•	•	•
208	208	DSM (Driver's School Module)	•	•	•	•	•
208	208	ECM (Engine Control Module)	•	•	•	•	•
208	208	EPS (Electric Power Steering)	•	•	•	•	•
208	208	IP (Instrument Cluster Panel)	•	•	•	•	•
208	208	LRU (Lighting Relay Unit)	•	•	•	•	•
208	208	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
208	208	MCP (Multiplexed Control Panel)	•	•	•	•	•
208	208	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
208	208	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
		System)	•	•	•	•	_
208	208	PAM (Parking Assistance)					•

000	000	nnc (n · A l n · l · C			•		
208	208	RBS (Rain And Brightness Sensor)	•	•	-	•	•
208	208	Radio	•	+ •		•	_
208	208 208	SM (Services Module) SRS (Airbag)	•	 •		•	•
208	208	SWIC (Steering Wheel With Integral Controls)	•	+ -		•	•
208	208		•	+ -		•	•
208	208	SWSM (Switch Module Under The Steering Wheel) Siren	•	+ -		•	•
	208		•	-	-	•	•
208		TCM (Automatic Gearbox)	•	 •	-	•	
208	208 208	TRU (Trailer Relay Unit) VRD (Voltage Retaining Device)	•	+ -		•	_
208	208 (Ai 91)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	+ -		•	
208	208 (Ai91) 208 (Ai91)	AC (Air Conditioning)	•	+ -		•	
	208 (Ai91) 208 (Ai91)	ALM (Anti-theft Alarm)	•	+ -		•	_
208	208 (Ai91) 208 (Ai91)		•	+ -		•	_
208 208	208 (Ai91) 208 (Ai91)	BSI (Built-in Systems Interface)	•	-	-	•	_
	208 (Ai91) 208 (Ai91)	CD (External CD Player)	•	+ -		•	
208	208 (Ai91) 208 (Ai91)	ECM (Engine Control Module) EPS (Electric Power Steering)	•	+ -		•	•
208	208 (Ai91) 208 (Ai91)	IP (Instrument Cluster Panel)	•	+ -		•	•
				_			
208	208 (Ai91)	MCP (Multiplexed Control Panel) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
208	208 (Ai91)	System)	•	•	•	•	•
208	208 (Ai91)	PAM (Parking Assistance)	•	•	•	•	•
208	208 (Ai91)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
208	208 (Ai91)	Radio	•	•	•	•	•
208	208 (Ai91)	SM (Services Module)	•	•	•	•	•
208	208 (Ai91)	SRS (Airbag)	•	•	•	•	•
208	208 (Ai91)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
208	208 (Ai91)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
208	208 (Ai91)	Siren	•	•	•	•	•
208	208 (Ai91)	TCM (Automatic Gearbox)	•	•	•	•	•
208	208 (Ai91)	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008	AC (Air Conditioning)	•	•	•	•	•
3008	3008	AC (Rear Air Conditioning)	•	•	•	•	•
3008	3008	ALM (Anti-theft Alarm)	•	•	•	•	•
3008	3008	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008	Alarm	•	•	•	•	•
3008	3008	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008	BATT (Traction Battery ECU)	•	•	•	•	•
3008	3008	BCM (Body Control Module)	•	•	•	•	•
3008	3008	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008	CD (CD Player)	•	•	•	•	•
3008	3008	CD (External CD Player)	•	•	•	•	•
3008	3008	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
3008	3008	DAF (Diesel Additive Pump)	•	•	•	•	•
3008	3008	DDC (Driver's Door Control Panel)	•	•	•	•	•
3008	3008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
3008	3008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008	Display	•	•	•	•	•
3008	3008	ECM (Engine Control Module)	•	•	•	•	•
3008	3008	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering GEP)	•	•	•	•	•
3008	3008	EPS (Electric Power Steering)	•	•	•	•	•
3008	3008	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008	ESL (Electric Steering Lock)	•	•	•	•	•
3008	3008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
3008	3008	HFC (Hands Free Control Kit)	•	•	•	•	•
3008	3008	HFR (High Frequency Receiver)	•	•	•	•	•
3008	3008	HHV (High Head Vision)	•	•		•	•
3008	3008	HLH (Headlamp Height Corrector)	•	 		•	•
3008	3008	HMS (Hybrid Mode Selector)	•	 •	•	•	•
5000	0000	ingo /iljuita mode beitelloi/	_				_

3008	3008	HYC-1 (Hybrid Control ECU 1)	•		•	•	•
3008	3008	HYC-2 (Hybrid Control ECU 2)	•	+ -	•	•	•
3008	3008	IP (Instrument Cluster Panel)	•	+ -	•	•	•
3008	3008	MAAP (Multiplexed Additive Adding Pump)	•	+ -	•	•	•
3008	3008	MCP (Multiplexed Control Panel)	•	 •	•	•	•
3008	3008	MULC (Multifunction Video Camera (CMF))	•	 •	•	•	_
3008	3008	MULS (Multifunction Screen)	•	 •		•	
3008	3008	N-TNB (Not Fastened Warning Light(Tnb))	•	+ -	•	•	
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio		+ •	_		•
3008	3008	System)	•	•	•	•	•
3008	3008	NIU (Network Isolation Unit)	•	•	•	•	•
3008	3008	PAM (Parking Assistance)	•	•	•	•	•
3008	3008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008	RBS (Rain And Brightness Sensor)	•	•	•	•	•
3008	3008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008	Radio	•	•	•	•	•
3008	3008	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
3008	3008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
3008	3008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	 	•	•	
		ECU)					_
3008	3008	SM (Services Module)	•	•	•	•	-
3008	3008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
3008	3008	SRS (Airbag)	•	•	•	•	•
3008	3008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
3008	3008	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
3008	3008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008	Siren	•	•	•	•	•
3008	3008	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008	TEU (Telematics Unit)	•	•	•	•	•
3008	3008	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008	TS (Touch Screen)	•	•	•	•	•
3008	3008	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
3008	3008	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (CHINA)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (CHINA)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008 (CHINA)	Alarm	•	•	•	•	•
3008	3008 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (CHINA)	DCP (Door Control Pad)	•	•	•	•	•
3008	3008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (CHINA)	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008 (CHINA)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
3008	3008 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
3008	3008 (CHINA)	HHV (High Head Vision)	•	•	•	•	•
3008	3008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (CHINA)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
3008	3008 (CHINA)	MULD (Multifunction Display)	•	•	•	•	•
3008	3008 (CHINA)	PAM (Parking Assistance)	•	•	•	•	•
3008	3008 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (CHINA)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
3008	3008 (CHINA)	Radio	•	•	•	•	•
3008	3008 (CHINA)	SM (Services Module)	•	•	•	•	•
3008	3008 (CHINA)	SRS (Airbag)	•	•	•	•	•
3008	3008 (CHINA)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
3008	3008 (CHINA)	TCM (Automatic Gearbox)	•	•	•	•	•
3008	3008 (CHINA)	TEU (Telematics Unit)	•	•	•	•	•
3008	3008 (CHINA)	UID (Under Inflation Detection)	•	•	•	•	•
		<u>'</u>		-	1	1	

2000	2000 (CIIINA)	VDD (V-14 D-4-ining D-11-in)	•	T •	•		•
3008	3008 (CHINA)	VRD (Voltage Retaining Device)	+	 		•	<u> </u>
3008	3008 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (Hybrid4)	ALM (Anti-theft Alarm)	+	•			
3008	3008 (Hybrid4)	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008 (Hybrid4)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	BATT (Traction Battery ECU)	•	•	•	•	•
3008	3008 (Hybrid4)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (Hybrid4)	CD (CD Player)	•	•	•	•	•
3008	3008 (Hybrid4)	DCP (Door Control Pad)	•	•	•	•	•
3008	3008 (Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
3008	3008 (Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
3008	3008 (Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
3008	3008 (Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
3008	3008 (Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
3008	3008 (Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
3008	3008 (Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (Hybrid4)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
3008	3008 (Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
3008	3008 (Hybrid4)	MULD (Multifunction Display)	•	•	•	•	•
3008	3008 (Hybrid4)	PAM (Parking Assistance)	•	•	•	•	•
3008	3008 (Hybrid4)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (Hybrid4)	RS (Rain Sensor)	•	•	•	•	•
3008	3008 (Hybrid4)	Radio	•	•	•	•	•
3008	3008 (Hybrid4)	SM (Services Module)	—		•	•	•
3008	3008 (Hybrid4)						•
		SRS (Airbag)	+	+		· -	<u> </u>
3008	3008 (Hybrid4)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
3008	3008 (Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	-
3008	3008 (Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
3008	3008 (Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	•
3008	3008 (Hybrid4)	VRD (Voltage Retaining Device)	•	•	•	•	-
3008	3008 (Hybrid4)	Wiper (Windscreen Wiper)	•	•	•	•	•
3008	3008 (P84)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
3008	3008 (P84)	AC (Air Conditioning)	•	•	•	•	•
3008	3008 (P84)	AC (Rear Air Conditioning)	•	•	•	•	•
3008	3008 (P84)	ALM (Anti-theft Alarm)	•	•	•	•	•
3008	3008 (P84)	AMP (Audio Amplifier)	•	•	•	•	•
3008	3008 (P84)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
3008	3008 (P84)	BATT (Battery Charge Status Unit)	•	•	•	•	•
3008	3008 (P84)	BCM (Body Control Module)	•	•	•	•	•
3008	3008 (P84)	BSI (Built-in Systems Interface)	•	•	•	•	•
3008	3008 (P84)	CD (External CD Player)	•	•	•	•	•
3008	3008 (P84)	DAF (Diesel Additive Pump)	•	•	•	•	•
3008	3008 (P84)	DDC (Driver's Door Control Panel)	•	•	•	•	•
3008	3008 (P84)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
3008	3008 (P84)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
3008	3008 (P84)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008 (P84)	Display	•	•	•	•	•
3008	3008 (P84)	ECM (Engine Control Module)	•	•	•	•	•
3008	3008 (F84)	EPS (Electric Power Steering)			-	•	•
		•			-		•
3008	3008 (P84)	ERU (Engine Relay Unit)	+	1		•	-
3008	3008 (P84)	ESL (Electric Steering Lock)	•	•	•	· -	•
3008	3008 (P84)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
3008	3008 (P84)	IP (Instrument Cluster Panel)	•	•	•	•	•
3008	3008 (P84)	MCP (Multiplexed Control Panel)	•	•	•	•	lacksquare
3008	3008 (P84)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
3008	3008 (P84)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•

	I		_	1 -	T _		_
3008	3008 (P84)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
3008	3008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
3008	3008 (P84)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
3008	3008 (P84)	Radio	•	•	•	•	•
3008	3008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
3008	3008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
3008	3008 (P84)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	•
3008	3008 (P84)	ECU) SM (Services Module)	•	—	•	•	•
3008	3008 (P84)	SPMU (Supply Protection And Management Unit)	•	 •	•	•	•
3008	3008 (P84)	SRS (Airbag)	•		•	•	•
			•	 •	-	•	
3008	3008 (P84)	SWC (Controls On The Steering Wheel)	•	+ -		•	_
3008	3008 (P84)	SWSM (Switch Module Under The Steering Wheel)	•	+ -		•	•
3008	3008 (P84)	Siren		-			•
3008	3008 (P84)	TCM (Automatic Gearbox)	•	-	•	•	•
3008	3008 (P84)	TCM (Sequential Gear Lever)	•	•	•	•	•
3008	3008 (P84)	TRU (Trailer Relay Unit)	•	•	•	•	•
3008	3008 (P84)	TS (Touch Screen)	•	•	•	•	•
3008	3008 (P84)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
3008	3008 (P84)	VRD (Voltage Retaining Device)	•	•	•	•	•
3008	3008 (P84)	Wiper (Windscreen Wiper)	•	•	•	•	•
301		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
301		BATT (Battery Charge Status Unit)	•	•	•	•	•
301		BSI (Built-in Systems Interface)	•	•	•	•	•
301		ECM (Engine Control Module)	•	•	•	•	•
301		EPS (Electric Power Steering)	•	•	•	•	•
301		ESL (Electric Steering Lock)	•	•	•	•	•
301		IP (Instrument Cluster Panel)	•	•	•	•	•
301		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
301		MULS (Multifunction Screen)	•	•	•	•	•
301		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	
		System)		<u> </u>			_
301		PAM (Parking Assistance)	•	•	•	•	•
301		Radio	•	•	•	•	•
301		SM (Services Module)	•	•	•	•	•
301		SRS (Airbag)	•	•	•	•	•
301		SWSM (Switch Module At The Steering Wheel)	•	•	•	•	•
301		Siren	•	•	•	•	•
301		TCM (Automatic Gearbox)	•	•	•	•	•
301		TRU (Trailer Relay Unit)	•	•	•	•	•
301		VRD (Voltage Retaining Device)	•	•	•	•	•
306	306	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306	ECM (Engine Control Module)	•	•	•	•	•
306	306	SRS (Airbag)	•	•	•	•	•
306	306	TCM (Automatic Gearbox)	•	•	•	•	•
306	306 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
306	306 (R)	ECM (Engine Control Module)	•	•	•	•	•
306	306 (R)	SRS (Airbag)	•	•	•	•	•
306	306 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	AC (Air Conditioning)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	Alarm	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	CD (CD Player)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	DAF (Diesel Additive Control Unit)	•	 •	•	•	•
307	307 (CAN) (2006. 01 -)	DDM (Driver's Door Module)	•	 •	-	•	•
307	307 (CAN) (2006. 01 -)	DSM (Driver's School Module)	•	 •		•	
			•	+ -	-	•	
307	307 (CAN) (2006. 01 -)	ECM (Engine Control Module)		+ -	<u> </u>	<u> </u>	
307	307 (CAN) (2006. 01 -)	EPS (Electric Power Steering)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	FR (Folding Roof)	•	•	•	•	_
307	307 (CAN) (2006. 01 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	HFR (High Frequency Receiver)	•	•	•	•	•

307	307 (CAN) (2006.01 -)	HI I C (I - 64 H 11 D I 1 C 4)	Ι.			•	
307	307 (CAN) (2006. 01 -)	HLLC (Left Headlamp Beam Level Corrector) HLRC (Right Headlamp Beam Corrector)	+ -				
307	307 (CAN) (2006. 01 -)	IP (Instrument Cluster Panel)	+ -				•
			 •		-	•	•
307	307 (CAN) (2006.01 -)	MAAP (Multiplexed Additive Adding Pump)	-	•	•	•	
307	307 (CAN) (2006. 01 -)	MULS (Multifunction Screen)	+			-	•
307	307 (CAN) (2006. 01 -)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	Radio	•	•	•	•	•
307	307 (CAN) (2006. 01 -)	SM (Services Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SRS (Airbag)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	SunRoof	•	•	•	•	•
307	307 (CAN) (2006.01 -)	TCM (Automatic Gearbox)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	TEU (Telematics Unit)	•	•	•	•	•
307	307 (CAN) (2006.01 -)	UID (Under Inflation Detection)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	AC (Air Conditioning)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Alarm	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	BSI (Built-in Systems Interface)	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	CD (CD Player)	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	DDM (Driver's Door Module)	 •	•	•	•	
			+ -		_	<u> </u>	
307	307 (VAN) (- 2005. 12)	DSM (Driver's School Module)	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	ECM (Engine Control Module)	•	•	•	•	-
307	307 (VAN) (- 2005.12)	EPS (Electric Power Steering GEP)	•	•	•	•	•
307	307 (VAN) (- 2005. 12)	IP (Instrument Cluster Panel)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	MULD (Multifunction Display)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	PAM (Parking Assistance)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	PDM (Passenger's Door Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	Radio	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SM (Services Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SRS (Airbag)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
307	307 (VAN) (- 2005.12)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	AC (Air Conditioning)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	AH (Additional Heating)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	Alarm	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	Alarm Lin	 	•	•	•	•
			+	 			
308	308 (2010. 01 - 2014. 09)	BATT (Battery Charge Status Unit)	•	•	•	•	
308	308 (2010. 01 - 2014. 09)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	CD (CD Player)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	CD (External CD Player)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	DDC (Driver's Door Control Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DDM (Driver's Door Module)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	DHL (Discharge Bulb With Directional Dipped Headlamp)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	FR (Folding Roof)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	HFR (High Frequency Receiver)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	IP (Instrument Cluster Panel)	•	•	•	•	•
	308 (2010. 01 - 2014. 09)		 		-		•
308	500 (2010.01 - 2014.09)	KEY (Electrionic Key Reader)				_	

200	200 (2010 01 2014 00)	I DIIIO (I D III)					
308	308 (2010. 01 - 2014. 09)	LDWS (Lane Departure Warning System)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	MPD (Moving Panel Deflector)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	N-TNB (Not Fastened Warning Light(Tnb))	•	•	•	•	•
308	308 (2010.01 - 2014.09)	NAVI (Telematic Navigator)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	Radio	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	<u> </u>	•	•	•
308	308 (2010. 01 - 2014. 09)	SM (Services Module)	•	—	•	•	
308	308 (2010. 01 - 2014. 09)	SPMU (Supply Protection And Management Unit)	•	•	•	•	
			÷	•	•	•	
308	308 (2010. 01 - 2014. 09)	SRS (Airbag) SWIC (Stooring Wheel With Integral Controls (VCI))	•	-	•	•	•
308	308 (2010. 01 - 2014. 09) 308 (2010. 01 - 2014. 09)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	-	•	•
308	,	SWSM (Steering Wheel Switching Module)		_	•		_
308	308 (2010. 01 - 2014. 09)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	Siren	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	SunRoof	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	TEU (Telematics Unit)	•	•	•	•	•
308	308 (2010. 01 - 2014. 09)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	UID (Under Inflation Detection)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (2010.01 - 2014.09)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (4 Doors)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (4 Doors)	AC (Air Conditioning)	•	•	•	•	•
308	308 (4 Doors)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (4 Doors)	Alarm	•	•	•	•	•
308	308 (4 Doors)	Alarm Lin	•	•	•	•	•
308	308 (4 Doors)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (4 Doors)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (4 Doors)	CD (CD Player)	•	•	•	•	•
308	308 (4 Doors)	DCP (Door Control Pad)	•	•	•	•	•
308	308 (4 Doors)	DHL (Directional Headlamps)	•	•	•	•	•
308	308 (4 Doors)	DSM (Driver's School Module)	•	•	•	•	•
308	308 (4 Doors)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (4 Doors)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (4 Doors)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
308	308 (4 Doors)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (4 Doors)	FR (Folding Roof)	•	•	•	•	•
308	308 (4 Doors)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (4 Doors)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (4 Doors)	LDWS (Lane Departure Warning System)	•	•	•	•	•
308	308 (4 Doors)	MPD (Moving Panel Deflector)	•	•	•	•	•
308	308 (4 Doors)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (4 Doors)	MULD (Multifunction Display)	•	•	•	•	•
308	308 (4 Doors)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (4 Doors)	PSM (Passenger's Seat Memorisation Unit)	•	•	•	•	
308	308 (4 Doors)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (4 Doors)	SB (Seat Belts Not Fastened LED Unit)	.	•	-	•	•
308	308 (4 Doors)	SM (Services Module)	•	-	-	•	•
308	308 (4 Doors)	SRS (Airbag)	•	•	•	•	•
			.	•	•	•	•
308	308 (4 Doors)	SWSM (Switch Module Under The Steering Wheel)	•				_

200	200 (4 D			T .	•		
308	308 (4 Doors)	SunRoof	•	+ -	+ -	•	-
308	308 (4 Doors)	TCM (Automatic Gearbox)	•	•	•	•	-
308	308 (4 Doors)	TEU (Telematics Unit)		-	⊢ Ť	•	•
308	308 (4 Doors)	UID (Under Inflation Detection)	•	+ <u> </u>	•	•	
308	308 (4 Doors)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (4 Doors)	Wiper (Windscreen Wiper)	•	•	•	•	•
308	308 (S)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (S)	AC (Air Conditioning)	•	•	•	•	•
308	308 (S)	Alarm	•	•	•	•	•
308	308 (S)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (S)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (S)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (S)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (S)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (S)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (S)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (S)	HFC (Hands Free Control Kit)	•	•	•	•	•
308	308 (S)	HLH (Headlamp Height Corrector)	•	•	•	•	•
308	308 (S)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (S)	KEY (Electrionic Key Reader)	•	•	•	•	•
308	308 (S)	MCP (Multiplexed Control Panel)	•	 		•	•
308	308 (S)	MSI (Matrix Screen Integral To The Instrument Panel)	•	 •		•	
	308 (S)	MULC (Multifunction Video Camera (CMF))	•	-		•	
308		` ''		+ <u> </u>	⊢ Ť		
308	308 (S)	MULD (Multifunction Display)	•	•	•	•	
308	308 (S)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (S)	NAVI (Telematic Navigator)	•	•	•	•	•
308	308 (S)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
308	308 (S)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (S)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (S)	Radio	•	•	•	•	•
308	308 (S)	SM (Services Module)	•	•	•	•	•
308	308 (S)	SPMU (Supply Protection And Management Unit)	•		•	•	•
308	308 (S)	SRS (Airbag)	•	•	•	•	•
308	308 (S)	SWIC (Steering Wheel With Integral Controls (VCI))	•	 		•	•
308	308 (S)			+ -			
		SWSM (Switch Module Under The Steering Wheel)	•	 	-	_	_
308	308 (S)	TCM (Automatic Gearbox)	•	•	-	•	•
308	308 (S)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (S)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AC (Air Conditioning)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AH (Additional Heating)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ALM (Anti-theft Alarm)	•	•	•	•	•
308	308 (T9) (2014.10 -)	AMP (Audio Amplifier)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BATT (Battery Charge Status Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (T9) (2014.10 -)	CD (External CD Player)	•	•	•	•	•
308	308 (T9) (2014.10 -)	DDC (Driver's Door Control Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (T9) (2014.10 -)	EPS (Electric Power Steering GEP)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ERU (Engine Relay Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (T9) (2014.10 -)	HFC (Hands Free Control Kit)	•	 		•	
			•	 •		•	
308		HLH (Headlamp Height Corrector)					
308	308 (T9) (2014.10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	KEY (Electrionic Key Reader)	•	•	•	•	_
308	308 (T9) (2014.10 -)	MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
	308 (T9) (2014.10 -)	MULD (Multifunction Display)	•			•	•

	I /> / >	I		т .	T _	1 _	
308	308 (T9) (2014.10 -)	MULS (Multifunction Screen)	•	•	•	•	•
308	308 (T9) (2014. 10 -)	NAVI (Telematic Navigator) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
308	308 (T9) (2014.10 -)	System)	•	•	•	•	•
308	308 (T9) (2014.10 -)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (T9) (2014.10 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Radio	•	•	•	•	•
308	308 (T9) (2014.10 -)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SM (Services Module)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SRS (Airbag)	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
308	308 (T9) (2014.10 -)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (T9) (2014.10 -)	Siren	•	•	•	•	•
308	308 (T9) (2014.10 -)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (T9) (2014.10 -)	TCM (Sequential Gear Lever)	•	•	•	•	•
308	308 (T9) (2014.10 -)	TRU (Trailer Relay Unit)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
308	308 (T9) (2014.10 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
308	308 (TX9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
308	308 (TX9)	AC (Air Conditioning)	•	•	•	•	•
308	308 (TX9)	BATT (Battery Charge Status Unit)	•	-	•	•	•
308	308 (TX9)	BSI (Built-in Systems Interface)	•	•	•	•	•
308	308 (TX9)	ECM (Engine Control Module)	•	•	•	•	•
308	308 (TX9)	EPS (Electric Power Steering)	•	•	•	•	•
308	308 (TX9)	ESL (Electric Steering Lock)	•	•	•	•	•
308	308 (TX9)	IP (Instrument Cluster Panel)	•	•	•	•	•
308	308 (TX9)	MCP (Multiplexed Control Panel)	•	•	•	•	•
308	308 (TX9)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
308	308 (TX9)	MULS (Multifunction Screen) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
308	308 (TX9)	System)	•	•	•	•	•
308	308 (TX9)	PAM (Parking Assistance)	•	•	•	•	•
308	308 (TX9)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
308	308 (TX9)	Radio	•	•	•	•	•
308	308 (TX9)	SM (Services Module)	•	•	•	•	•
308	308 (TX9)	SRS (Airbag)	•	•	•	•	•
308	308 (TX9)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
308	308 (TX9)	TCM (Automatic Gearbox)	•	•	•	•	•
308	308 (TX9)	VRD (Voltage Retaining Device)	•	•	•	•	•
4007	4007	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
4007	4007	AC (Air Conditioning)	•	•	•	•	•
4007	4007	BSI (Built-in Systems Interface)	•	•	•	•	•
4007	4007	CAS (Coded Anti-start)	•	•	•	•	•
4007	4007	DDM (Driver's Door Module)	•	•	•	•	•
4007	4007	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4007	4007	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
4007	4007	DSPRLH (Rear LH Door Switch Panel)	•	•	•	•	•
4007	4007	DSPRRH (Rear RH Door Switch Panel)	•	•	•	•	•
4007	4007	ECM (Engine Control Module)	•	•	•	•	•
4007	4007	HFC (Hands Free Control Kit)	•	•	•	•	•
4007	4007	IP (Instrument Cluster Panel)	•	•	•	•	•
4007	4007	NAVI (Navigation)	•	•	•	•	•
4007	4007	PAM (Parking Assistance)	•	•	•	•	•
4007	4007	PDM (Passenger's Door Module)	•	•	•	•	•
4007	4007	Radio	•	•	•	•	•
4007	4007	SAS (Flywheel Angle Sensor)	•	•	•	•	•
4007	4007	SRS (Airbag)	•	•	•	•	•
4007	4007	SunRoof	•	•	•	•	•
4007	4007	TCM (Automatic Gearbox)	•	•	•	•	•
4007	4007	TCM (Gear Lever(Dct))	•	•	•	•	•
4008	4008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•

4000	4000	AC (Air C litinin)		Τ_			_
4008	4008	AC (Air Conditioning)	•	•	•	•	•
4008	4008	AC (Rear Air Conditioning)	•	•	•	•	•
4008	4008	ALM (Anti-theft Alarm)		•	•	•	•
4008	4008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
4008	4008	AUTH (Starting Authorisation ECU)	•	•	•	•	•
4008	4008	BATT (Battery Charge Status Unit)	•	•	•	•	•
4008	4008	BCM (Body Control Module)	•	•	•	•	•
4008	4008	BSI (Built-in Systems Interface)	•	•		•	•
4008	4008	CAS/HFCU (Coded Anti-start/Hands-free Control Unit)	•	•	•	•	•
4008	4008	CD (External CD Player)	•	-	•	•	•
4008	4008	DAF (Diesel Additive Pump)	•	-	•	•	•
4008	4008	DDC (Driver's Door Control Panel)	•	•	•	•	•
4008	4008	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4008	4008	DPCRF (Rear Final Drive Piloted Clutch)	•	•	•	•	•
4008	4008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
4008	4008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008	Display	•	•	•	•	•
4008	4008	ECM (Engine Control Module)	•	•	•	•	•
4008	4008	EPS (Electric Power Steering)	•	•	•	•	•
4008	4008	ERU (Engine Relay Unit)	•	•	•	•	•
4008	4008	ESL (Electric Steering Lock)	•	•	•	•	•
4008	4008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
4008	4008	IP (Instrument Cluster Panel)	•	•	•	•	•
4008	4008	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008	4008	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
4008	4008	NAVI (Navigation)	•	•	•	•	•
4008	4008	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
4008	4008	System) PAM (Parking Assistance)	•	•	•	•	•
4008	4008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
4008	4008	ROR (Radio Or Radiotelephone (Radio Part))	•	•	•	•	•
4008	4008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
4008	4008	Radio	•	•	•	•	
4008	4008	SAS (Steering Wheel Angle Sensor)	<u> </u>	•	•	•	•
4008	4008	SB (Seat Belts Not Fastened LED Unit(TNB))		-			
				 			
4008	4008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008	SM (Services Module)	•	•	•	•	•
4008	4008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008	4008	SRS (Airbag)	•	•	•	•	•
4008	4008	SSC (Stop And Start Control ECU)	•	•	•	•	•
4008	4008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
4008	4008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
4008	4008	Siren	•	•	•	•	•
4008	4008	TCM (Automatic Gearbox)	•	•	•	•	•
4008	4008	TCM (Sequential Gear Lever)	•	•	•	•	•
4008	4008	TRU (Trailer Relay Unit)	•	•	•	•	•
4008	4008	TS (Touch Screen)	•	•	•	•	•
4008	4008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
4008	4008	VRD (Voltage Retaining Device)	.	•		•	-
4008	4008	Wiper (Windscreen Wiper)	.	•	•	•	•
4008	4008 (CHINA)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	-	•	•	•
4008	4008 (CHINA)	AC (Air Conditioning)	.		•	•	•
			•	•	•	•	
4008	4008 (CHINA)	AC (Rear Air Conditioning)	•		•		_
4008	4008 (CHINA)	ALM (Anti-theft Alarm)		•		•	
4008	4008 (CHINA)	ASM (Anti-slip Mode Selector)	•		•	•	_
4008	4008 (CHINA)	BATT (Battery Charge Status Unit)	•	•	•	•	•
4008	4008 (CHINA)	BCM (Body Control Module)	•	•	•	•	•
4008	4008 (CHINA)	BSI (Built-in Systems Interface)	•	•	•	•	•
4008	4008 (CHINA)	CD (External CD Player)	•	•	•	•	•

1000	1000 (0077)	DID (DI LILIUM DI)					
4008	4008 (CHINA)	DAF (Diesel Additive Pump)	•	•	•	•	•
4008	4008 (CHINA)	DDC (Driver's Door Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
4008	4008 (CHINA)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
4008	4008 (CHINA)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
4008	4008 (CHINA)	Display	•	•	•	•	•
4008	4008 (CHINA)	ECM (Engine Control Module)	•	•	•	•	•
4008	4008 (CHINA)	EPS (Electric Power Steering)	•	•	•	•	•
4008	4008 (CHINA)	ERU (Engine Relay Unit)	•	•	•	•	•
4008	4008 (CHINA)	ESL (Electric Steering Lock)	•	•	•	•	•
4008	4008 (CHINA)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
4008	4008 (CHINA)	IP (Instrument Cluster Panel)	•	•	•	•	•
4008	4008 (CHINA)	MCP (Multiplexed Control Panel)	•	•	•	•	•
4008	4008 (CHINA)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
4008	4008 (CHINA)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
4008	4008 (CHINA)	System) PAM (Parking Assistance)	•	•	•	•	•
4008	4008 (CHINA)	PSP (Passenger's Seat Pneumatic Functions ECU)	<u> </u>	•	•	•	•
4008	4008 (CHINA)	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
4008	4008 (CHINA)	RSS (Rain-sunlight Sensor)	÷	•	•	•	
4008	4008 (CHINA) 4008 (CHINA)	RSS (Kain-sunlight Sensor) Radio	·	-	•	•	•
			•	•	•	•	•
4008	4008 (CHINA)	SB (Seat Belts Not Fastened LED Unit(TNB))			 		
4008	4008 (CHINA)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008 (CHINA)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
4008	4008 (CHINA)	SM (Services Module)	•	•	•	•	•
4008	4008 (CHINA)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
4008	4008 (CHINA)	SRS (Airbag)	•	•	•	•	•
4008	4008 (CHINA)	SWC (Controls On The Steering Wheel)	•	•	•	•	
4008	4008 (CHINA)	SWSM (Switch Module Under The Steering Wheel)		•	•	•	
4008	4008 (CHINA)	Siren	÷				
4008	4008 (CHINA)	TCM (Automatic Gearbox)	÷			•	
4008			<u> </u>			•	
-	4008 (CHINA)	TCM (Sequential Gear Lever)			-		•
4008	4008 (CHINA)	TRU (Trailer Relay Unit)	•	•	•	•	•
4008	4008 (CHINA)	TS (Touch Screen)	•	•	-	•	•
4008	4008 (CHINA)	VDA (Vehicle Distance Assistance)	•	•	-	•	•
4008	4008 (CHINA)	VRD (Voltage Retaining Device)	•	•	•	•	•
4008	4008 (CHINA)	Wiper (Windscreen Wiper)	•	•	•	•	•
406	406	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406	AC (Air Conditioning)	•	•	•	•	•
406	406	Alarm	•	•	•	•	•
406	406	BSI (Built-in Systems Interface)	•	•	•	•	•
406	406	CD (CD Player)	•	•	•	•	•
406	406	DAF (Diesel Additive Control Unit)	•	•	•	•	•
406	406	ECM (Engine Control Module)	•	•	•	•	•
406	406	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406	MULS (Multifunction Screen)	•	•	•	•	•
406	406	NAVI (On-board Navigation System)	•	•	•	•	•
406	406	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406	Radio	•	•	•	•	•
406	406	SRS (Airbag)	•	•	•	•	•
406	406	SSP (Electronically Managed Suspension)	•	•	•	•	•
406	406	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R Coupe)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (R Coupe)	AC (Air Conditioning)	•	•	•	•	•
406	406 (R Coupe)	Alarm	•	•	•	•	•
406	406 (R Coupe)	BSI (Built-in Systems Interface)	÷	•	•	•	•
100	100 (K coupe)	DOI (DUITE IN DYSICMS INTELLACE)				_	

406	406 (D. C)	CD (CD D1)	Τ.		•	•	•
	406 (R Coupe)	CD (CD Player)	+ -	<u> </u>	<u> </u>	•	-
406	406 (R Coupe)	DAF (Diesel Additive Control Unit)		•	•		•
406	406 (R Coupe)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (R Coupe)	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406 (R Coupe)	MULS (Multifunction Screen)	•	•	•	•	•
406	406 (R Coupe)	NAVI (On-board Navigation System)	•	•	•	•	•
406	406 (R Coupe)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
406	406 (R Coupe)	Radio	•	•	•	•	•
406	406 (R Coupe)	SRS (Airbag)	•	•	•	•	•
406	406 (R Coupe)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R Coupe)	TCM (Automatic Gearbox)	•	•	•	•	•
406	406 (R)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
406	406 (R)	AC (Air Conditioning)	•	•	•	•	•
406	406 (R)	Alarm	•	•	•	•	•
406	406 (R)	BSI (Built-in Systems Interface)	•	•	•	•	•
406	406 (R)	CD (CD Player)	•	•	•	•	•
406	406 (R)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
406	406 (R)	ECM (Engine Control Module)	•	•	•	•	•
406	406 (R)	IP (Instrument Cluster Panel)	•	•	•	•	•
406	406 (R)	MULS (Multifunction Screen)	+ -	<u> </u>	•	•	•
406	406 (R)	NAVI (On-board Navigation System)	+ ÷			•	
406	406 (R)	RBS (Rain And Brightness Sensor)	+ -			•	
							-
406	406 (R)	Radio	•	•	•	•	•
406	406 (R)	SRS (Airbag)	•	•	•	•	•
406	406 (R)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
406	406 (R)	TCM (Automatic Gearbox)	•	•	•	•	•
407		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
407		AC (Air Conditioning)	•	•	•	•	•
407		AH (Additional Heating)	•	•	•	•	•
407		Alarm	•	•	•	•	•
407		BATT (Battery Charge Status Unit)	•	•	•	•	•
407		BSI (Built-in Systems Interface)	•	•	•	•	•
407		BW (Boot Wiring)	•	•	•	•	•
407		CD (CD Player)	•	•	•	•	•
407		DAF (Diesel Additive Control Unit)	•	•	•	•	•
407		DDM (Driver's Door Module)	•	•	•	•	•
407		DHL (Directional Headlamps)	•	•	•	•	•
407		DSMU (Driver's Seat Memory Unit)	+ -	•	•	•	
407		ECM (Engine Control Module)	+ ÷		•	•	•
			+				
407		EPS (Electric Power Steering)	•	•	•	•	•
407		HFC (Hands Free Control Kit)	•	•	•	•	•
407		HFR (High Frequency Receiver)	•	•	•	•	•
407		HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
407		HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
407		IP (Instrument Cluster Panel)	•	•	•	•	•
407	ļ	MULD (Multifunction Display)	•	•	•	•	•
407		PAM (Parking Assistance)	•	•	•	•	•
407		PDM (Passenger's Door Module)	•	•	•	•	•
407		PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
407		RBS (Rain And Brightness Sensor)	•	•	•	•	•
407		Radio	•	•	•	•	•
407		SRS (Airbag)	•	•	•	•	•
407		SSP (Electronically Managed Suspension)	•	•	•	•	•
407	1	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
407	<u> </u>	SunRoof	 •	•	•	•	•
407		TCM (Automatic Gearbox)	+ ÷			•	
	+		+ ÷			•	
407	+	TEU (Telematics Unit)					
407		UID (Under Inflation Detection)	•	•	•	•	-
407	/	Wiper (Windscreen Wiper)	•	•	•	•	-
408	408 (2010. 01 - 2014. 09)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	AC (Air Conditioning)	•			•	

408	400 (9010 01 9014 00)	AMD (A.J.: A1:6:)	•	•	•	•	
	408 (2010. 01 - 2014. 09)	AMP (Audio Amplifier)			_	•	
408	408 (2010. 01 - 2014. 09)	Alarm	•		•	•	
408	408 (2010. 01 - 2014. 09) 408 (2010. 01 - 2014. 09)	Alarm Lin BATT (Battery Charge Status Unit)	<u> </u>	•	-	•	
408	408 (2010. 01 - 2014. 09)	BSI (Built-in Systems Interface)	•	-		•	•
408	408 (2010. 01 - 2014. 09)	CD (CD Player)	$\dot{}$	•	•	•	•
408	408 (2010. 01 - 2014. 09)	DDM (Driver's Door Module)	•	•	-	•	•
408	408 (2010. 01 - 2014. 09)	DHL (Discharge Bulb With Directional Dipped Headlamp)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	DSM (Driver's School Module)	<u> </u>	—	-	•	
408	408 (2010. 01 - 2014. 09)	DSMU (Driver's Seat Memory Unit)	-	 	•	•	
408	408 (2010. 01 - 2014. 09)	ECM (Engine Control Module)	•	—	•	•	
408	408 (2010. 01 - 2014. 09)	EPS (Electric Power Steering GEP)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	EPS (Electric Power Steering)	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	ERU (Engine Relay Unit)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	ESL (Electric Steering Lock)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	FR (Folding Roof)	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	HFC (Hands Free Control Kit)	•	—	•	•	
408	408 (2010. 01 - 2014. 09)	HFR (High Frequency Receiver)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	IP (Instrument Cluster Panel)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	KEY (Electrionic Key Reader)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	LDWS (Lane Departure Warning System)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	MAAP (Multiplexed Additive Adding Pump)	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	MCP (Multiplexed Control Panel)	<u> </u>	<u> </u>	•	•	•
408	408 (2010. 01 - 2014. 09)	MPD (Moving Panel Deflector)	•	—	•	•	
408	408 (2010. 01 - 2014. 09)	MSI (Matrix Screen Integral To The Instrument Panel)	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	MULC (Multifunction Video Camera (CMF))	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	MULD (Multifunction Display)	•	•	•	•	
408	408 (2010. 01 - 2014. 09)	MULS (Multifunction Screen)	•	•	•	•	
408	408 (2010. 01 - 2014. 09)	N-TNB (Not Fastened Warning Light(Tnb))	<u> </u>	•	•	•	•
408	408 (2010. 01 - 2014. 09)	NAVI (Telematic Navigator)	•	•	•	•	•
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	
408	408 (2010. 01 - 2014. 09)	System)		-	<u> </u>		-
408	408 (2010. 01 - 2014. 09)	PAM (Parking Assistance)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	PSM (Passenger's Seat Memorizing Unit)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	Radio	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SM (Services Module)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SRS (Airbag)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	SunRoof	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	TCM (Automatic Gearbox)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	TCM (Sequential Gear Lever)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	TEU (Telematics Unit)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	TRU (Trailer Relay Unit)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	UID (Under Inflation Detection)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	VRD (Voltage Retaining Device)	•	•	•	•	•
408	408 (2010. 01 - 2014. 09)	Wiper (Windscreen Wiper)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
408	408 (T93) (2014.10 -)	AC (Air Conditioning)	•	•	•	•	•
408	408 (T93) (2014.10 -)	Alarm	•	•	•	•	•
408	408 (T93) (2014.10 -)	BATT (Battery Charge Status Unit)	•	<u> </u>	•	•	•
408	408 (T93) (2014.10 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
408	408 (T93) (2014.10 -)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
408	408 (T93) (2014. 10 -)	ECM (Engine Control Module)	•	•	•	•	•
408	408 (T93) (2014.10 -)	EPS (Electric Power Steering GEP)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ERU (Engine Relay Unit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	ESL (Electric Steering Lock)	•	•	•	•	•
408	408 (T93) (2014. 10 -)	HFC (Hands Free Control Kit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	HLH (Headlamp Height Corrector)	•	•	•	•	•

	<u> </u>	T ,	_		_	<u> </u>	_
408	408 (T93) (2014. 10 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	KEY (Electrionic Key Reader)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MCP (Multiplexed Control Panel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
408	408 (T93) (2014. 10 -)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
408	408 (T93) (2014.10 -)	MULD (Multifunction Display)	•	•	•	•	•
408	408 (T93) (2014.10 -)	MULS (Multifunction Screen)	•	•	•	•	•
408	408 (T93) (2014.10 -)	NAVI (Telematic Navigator)	•	•	•	•	•
408	408 (T93) (2014.10 -)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
408	408 (T93) (2014.10 -)	PAM (Parking Assistance)	•	•	•	•	•
408	408 (T93) (2014.10 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
408	408 (T93) (2014.10 -)	Radio	•	•	•	•	•
408	408 (T93) (2014.10 -)	SM (Services Module)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SRS (Airbag)	•	•	•	•	•
408	408 (T93) (2014.10 -)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
408	408 (T93) (2014.10 -)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
408	408 (T93) (2014.10 -)	TCM (Automatic Gearbox)	•	•	•	•	•
408	408 (T93) (2014.10 -)	TCM (Sequential Gear Lever)	•	•	•	•	•
408	408 (T93) (2014.10 -)	VRD (Voltage Retaining Device)	•	•	•	•	•
5008	5008	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
5008	5008	AC (Air Conditioning)	•	•	•	•	•
5008	5008	AC (Rear Air Conditioning)	•	•	•	•	•
5008	5008	ALM (Anti-theft Alarm)	•	•	•	•	•
5008	5008	AMP (Audio Amplifier)	•	•	•	•	•
5008	5008	ASM (Anti-slip Mode Selector)	•	•	•	•	•
5008	5008	Alarm	•	•	•	•	•
5008	5008	BATT (Battery Charge Status Unit)	•	•	•	•	•
5008	5008	BCM (Body Control Module)	•	•	•	•	•
5008	5008	BSI (Built-in Systems Interface)	•	•	•	•	•
5008	5008	CD (CD Player)	•	•	•	•	•
5008	5008	CD (External CD Player)	•	•	•	•	•
5008	5008	CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
5008	5008	DAF (Diesel Additive Pump)	•	•	•	•	•
5008	5008	DDC (Driver's Door Control Panel)	•	•	•	•	•
5008	5008	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
5008	5008	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008	Display	•	•	•	•	•
5008	5008	ECM (Engine Control Module)	•	•	•	•	•
5008	5008	EPB (Electric Secondary Brake)	•	•	•	•	•
5008	5008	EPS (Electric Power Steering)	•	•	•	•	•
5008	5008	ERU (Engine Relay Unit)	•	•	•	•	•
5008	5008	ESL (Electric Steering Lock)	•	•	•	•	•
5008	5008	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
5008	5008	HFC (Hands Free Control Kit)	•	•	•	•	•
5008	5008	HFR (High Frequency Receiver)	•	•	•	•	•
5008	5008	HHV (High Head Vision)	•	•	•	•	•
5008	5008	HLH (Headlamp Height Corrector)	•	 •	•	•	•
5008	5008	IP (Instrument Cluster Panel)	•	•	•	•	•
5008	5008	LDWS (Lane Departure Warning System)	•	•	-	•	•
5008	5008	MAAP (Multiplexed Additive Adding Pump)	•	 •		•	•
5008	5008	MCP (Multiplexed Control Panel)	•	 •	-	•	•
5008	5008	MULC (Multifunction Video Camera (CMF))	•	 •		•	•
5008	5008	MULS (Multifunction Screen)	•	 •	-	•	
5008	5008	N-TNB (Not Fastened Warning Light(Tnb))	•			•	
		N-INB (Not Fastened warning Light(Inb)) NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	_	+ -	 		_
5008	5008	System)	•	•	•	•	•
5008	5008	NIU (Network Isolation Unit)	•	•	•	•	•
5008	5008	PAM (Parking Assistance)	•	•	•	•	•
5008	5008	PSP (Passenger's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008	PVA (Panoramic Visual Assistance ECU)	•	•	•	•	•
5008	5008	RBS (Rain And Brightness Sensor)	•	•	•	•	•

E008	5000	ncc (h.i.,link C)		T -		_	
5008	5008	RSS (Rain-sunlight Sensor)	•	•	•	•	•
5008 5008	5008 5008	Radio SB (Seat Belts Not Fastened LED Unit(TNB))	<u> </u>	-		-	
				+ -	 		
5008	5008	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU) SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation	•	•	•	•	
5008	5008	ECU)	•	•	•	•	•
5008	5008	SM (Services Module)	•	•	•	•	•
5008	5008	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
5008	5008	SRS (Airbag)	•	•	•	•	•
5008	5008	SWC (Controls On The Steering Wheel)	•	•	•	•	•
5008	5008	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
5008	5008	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008	Siren	•	•	•	•	•
5008	5008	TCM (Automatic Gearbox)	•	•	•	•	•
5008	5008	TCM (Sequential Gear Lever)	•	•	•	•	•
5008	5008	TEU (Telematics Unit)	•	•	•	•	•
5008	5008	TRU (Trailer Relay Unit)	•	•	•	•	•
5008	5008	TS (Touch Screen)	•	•	•	•	•
5008	5008	UID (Under Inflation Detection)	•	•	•	•	•
5008	5008	VDA (Vehicle Distance Assistance)	•	•	•	•	•
5008	5008	VRD (Voltage Retaining Device)	<u> </u>	•		-	•
5008	5008 5008 (P84)	Wiper (Windscreen Wiper) ARS/ESD (Anti-lock broke System Or Floatnic Stability Program)	•	-	•	•	
5008	5008 (P84)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	<u> </u>	+ -		•	
5008 5008	5008 (P84) 5008 (P84)	AC (Air Conditioning) AC (Rear Air Conditioning)	•	+ -		•	
5008	5008 (P84) 5008 (P84)	AC (Kear Air Conditioning) ALM (Anti-theft Alarm)	•	+ -	-	•	
5008	5008 (P84)	AMP (Audio Amplifier)	$\overline{\cdot}$	+ -			
5008	5008 (P84)	ASM (Anti-slip Mode Selector)	.	 •		•	
5008	5008 (P84)	BATT (Battery Charge Status Unit)	.	 •			
5008	5008 (P84)	BCM (Body Control Module)	•	 •	•	•	
5008	5008 (P84)	BSI (Built-in Systems Interface)	.	 •	•	•	•
5008	5008 (P84)	CD (External CD Player)	•	•	•	•	•
5008	5008 (P84)	DAF (Diesel Additive Pump)	•	 •	•	•	•
5008	5008 (P84)	DDC (Driver's Door Control Panel)	•	<u> </u>	<u> </u>	•	•
5008	5008 (P84)	DHL (Headlamp Height Adjuster/Directional Headlamp)	•	•	•	•	•
5008	5008 (P84)	DSC (Driver's Seat Comfort ECU)	•	•	•	•	•
5008	5008 (P84)	DSP (Driver's Seat Pneumatic Functions ECU)	•	•	•	•	•
5008	5008 (P84)	Display	•	•	•	•	•
5008	5008 (P84)	ECM (Engine Control Module)	•	•	•	•	•
5008	5008 (P84)	EPS (Electric Power Steering)	•	•	•	•	•
5008	5008 (P84)	ERU (Engine Relay Unit)	•	•	•	•	•
5008	5008 (P84)	ESL (Electric Steering Lock)	•	•	•	•	•
5008	5008 (P84)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
5008	5008 (P84)	IP (Instrument Cluster Panel)	•	•	•	•	•
5008	5008 (P84)	MCP (Multiplexed Control Panel)	•	•	•	•	•
5008	5008 (P84)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
5008	5008 (P84)	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	•	•	•	•	•
5008	5008 (P84)	System) PAM (Parking Assistance)	•	•	•	•	•
5008	5008 (P84)	PSP (Passenger's Seat Pneumatic Functions ECU)	•	 •		•	•
5008	5008 (P84)	PVA (Panoramic Visual Assistance ECU)	•	 •		•	
5008	5008 (P84)	RSS (Rain-sunlight Sensor)	•	 •			
5008	5008 (P84)	Radio	•	 •	•	•	•
5008	5008 (P84)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
5008	5008 (P84)	SHP/VR (Front Left Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
5008	5008 (P84)	SHP/VR (Front Right Seat Heated Pads And Ventilation Regulation ECU)	•	•	•	•	•
5008	5008 (P84)	SM (Services Module)	•	•	•	•	•
5008	5008 (P84)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
5008	5008 (P84)	SRS (Airbag)	•	•	•	•	•
5008	5008 (P84)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
5008	5008 (P84)	Siren	•	•	•	•	•
<u> </u>	!				!		

5000	5000 (DOI)	TOU (A	т.	T _			
5008	5008 (P84)	TCM (Automatic Gearbox)	•	•	•	•	•
5008	5008 (P84)	TCM (Sequential Gear Lever)	•	•	•	•	<u> </u>
5008	5008 (P84)	TRU (Trailer Relay Unit)	•	•	•	•	•
5008	5008 (P84)	TS (Touch Screen)	•	•	•	•	•
5008	5008 (P84)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
5008	5008 (P84)	VRD (Voltage Retaining Device)	•	•	•	•	•
5008	5008 (P84)	Wiper (Windscreen Wiper)	•	•	•	•	•
508	508	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508	AC (Air Conditioning)	•	•	•	•	•
508	508	AC (Rear Air Conditioning)	•	•	•	•	•
508	508	AH (Additional Heating)	•	•	•	•	•
508	508	AMP (Radio Amplifier)	•	•	•	•	•
508	508	Alarm	•	•	•	•	•
508	508	BATT (Battery Charge Status Unit)	•	•	•	•	•
508	508	BATT (Traction Battery ECU)	•	•	•	•	•
508	508	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508	DDC (Driver's Door Control Panel)	•	•	•	•	•
508	508	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508	ECM (Engine Control Module)	•	•	•	•	•
508	508	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508	EPS (Electric Power Steering GEP)	•		•	•	
508	508	ERU (Engine Relay Unit)	+ -			•	
508	508	ESL (Electric Steering Lock)	+ -	-		•	
			_				-
508	508	HFC (Hands Free Control Kit)	•	•	•	•	-
508	508	HHV (High Head Vision)	•	•	•	•	-
508	508	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	-
508	508	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508	MBA (Main Beams Assistant)	•	•	•	•	•
508	508	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508	MOTO (Motorised Boot ECU)	•	•	•	•	•
508	508	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508	MULS (Multifunction Screen)	•	•	•	•	•
508	508	NAVI (Telematic Navigator)	•	•	•	•	•
508	508	PAM (Parking Assistance)	•	•	•	•	•
508	508	RBS (Rain And Brightness Sensor)	•	•	•	•	•
508	508	Radio	•	•	•	•	•
508	508	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508	SM (Services Module)	•	•	•	•	•
508	508	SPMU (Supply Protection And Management Unit)	-	•		•	
508	508	SRS (Airbag)	+ -	•		•	
508	508	SSP (Active Damper Electronic Unit)	+ -	-		•	
508	508	SWIC (Steering Wheel With Integral Controls (VCI))	+ -	-	-	•	
			_	<u> </u>			
508	508	SWSM (Switch Module Under The Steering Wheel (Top Of Column))	•	•	•	•	<u> </u>
508	508	TCM (Automatic Gearbox)	•	•	•	•	-
508	508	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	-
508	508	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508	UID (Under Inflation Detection)	•	•	•	•	•
508	508	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
508	508 (Hybrid4)	AC (Rear Air Conditioning)	•	•	•	•	•
508	508 (Hybrid4)	AH (Additional Heating)	•	•	•	•	•
508	508 (Hybrid4)	ALM (Anti-theft Alarm)	•	•	•	•	•
			_				
508	508 (Hybrid4)	AMP (Audio Amplifier)	•	•	•	•	•

508	508 (Hybrid4)	BATT (Traction Battery ECU)	Ι.		•	•	
508	508 (Hybrid4)	BSI (Built-in Systems Interface)	+ -		•	•	
508	, , ,		+ -				•
508	508 (Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment) DCP (Door Control Pad)	+ -			•	•
	508 (Hybrid4)	, , , , , , , , , , , , , , , , , , ,	-	•	•	•	•
508	508 (Hybrid4)	DSMU (Driver's Seat Memory Unit)	+				•
508	508 (Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
508	508 (Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508 (Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508 (Hybrid4)	KEY (Electrionic Key Reader)	•	•	•	•	•
508	508 (Hybrid4)	MBA (Main Beams Assistant)	•	•	•	•	•
508	508 (Hybrid4)	MCP (Multiplexed Control Panel)	•	•	•	•	•
508	508 (Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508 (Hybrid4)	MULD (Multifunction Display)	•	•	•	•	•
508	508 (Hybrid4)	NAVI (Telematic Navigator)	•	•	•	•	•
508	508 (Hybrid4)	PAM (Parking Assistance)	•	•	•	•	
508	508 (Hybrid4)	Radio RD5	•	•	•	•	
			+ -			•	
508	508 (Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB))	+ -				•
508	508 (Hybrid4)	SM (Services Module)	•	•	•	•	•
508	508 (Hybrid4)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (Hybrid4)	SRS (Airbag)	•	•	•	•	•
508	508 (Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (Hybrid4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508 (Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	•
508	508 (Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (Hybrid4)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	•
508	508 (Hybrid4)	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508 (Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508 (Hybrid4)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (RXH Hybrid4)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AC (Rear Air Conditioning)	•	•	•	•	•
508	508 (RXH Hybrid4)	AH (Additional Heating)	•	•	•	•	•
508	508 (RXH Hybrid4)	ALM (Anti-theft Alarm)	•	•	•	•	•
508	508 (RXH Hybrid4)	AMP (Audio Amplifier)	 		•	•	
508	508 (RXH Hybrid4)	BATT (Battery Charge Status Unit)	+ -	<u> </u>		•	
508	508 (RXH Hybrid4)	BATT (Traction Battery ECU)			•	•	
508	·	BSI (Built-in Systems Interface)	•		•	•	
	508 (RXH Hybrid4)			+ -			
508	508 (RXH Hybrid4)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	-	•	•	-
508	508 (RXH Hybrid4)	DCP (Door Control Pad)	•	•	•	•	-
508	508 (RXH Hybrid4)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	-
508	508 (RXH Hybrid4)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (RXH Hybrid4)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (RXH Hybrid4)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (RXH Hybrid4)	HHV (High Head Vision)	•	•	•	•	•
508	508 (RXH Hybrid4)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (RXH Hybrid4)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (RXH Hybrid4)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508 (RXH Hybrid4)	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508 (RXH Hybrid4)	KEY (Electrionic Key Reader)	•	•	•	•	•
	, ., ., ., .,		1 -				

508	508 (RXH Hybrid4)	MBA (Main Beams Assistant)	1	•	•	•	
508	508 (RXH Hybrid4)	MCP (Multiplexed Control Panel)	+ -		-		
508	<u> </u>		+ -	-	-		
508	508 (RXH Hybrid4)	MSI (Matrix Screen Integral To The Instrument Panel)	+ -	•	•	•	
	508 (RXH Hybrid4)	MULD (Multifunction Display)	+ •	•	•	•	•
508	508 (RXH Hybrid4)	NAVI (Telematic Navigator)	+	<u> </u>	-		•
508	508 (RXH Hybrid4)	PAM (Parking Assistance)	•	•	•	•	-
508	508 (RXH Hybrid4)	Radio RD5	•	•	•	•	•
508	508 (RXH Hybrid4)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508 (RXH Hybrid4)	SM (Services Module)	•	•	•	•	•
508	508 (RXH Hybrid4)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	SRS (Airbag)	•	•	•	•	•
508	508 (RXH Hybrid4)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (RXH Hybrid4)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
508	508 (RXH Hybrid4)	TCM (Automatic Gearbox)	•	•	•	•	•
508	508 (RXH Hybrid4)	TEU (Telematics Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	TRU (Trailer Relay Unit)	•	•	•	•	•
508	508 (RXH Hybrid4)	UID (Under Inflation Detection)	•	•	•	•	•
508	508 (RXH Hybrid4)	VRD (Voltage Retaining Device)	•	•	•	•	•
508	508 (RXH Hybrid4)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	•
508	508 (RXH Hybrid4)	Wiper-R (Windscreen Wiper (Right-hand Side))	•	•	•	•	•
508	508 (RXH)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
508	508 (RXH)	AC (Air Conditioning)	•	•	•	•	
508	508 (RXH)	AC (Rear Air Conditioning)	•	•	•	•	-
508	508 (RXH)	·	+ -	•	•		
		AH (Additional Heating)	_		<u> </u>	•	
508	508 (RXH)	ALM (Anti-theft Alarm)	•	•	•		•
508	508 (RXH)	AMP (Audio Amplifier)	•	•	•	•	•
508	508 (RXH)	BATT (Battery Charge Status Unit)	•	•	•	•	•
508	508 (RXH)	BATT (Traction Battery ECU)	•	•	•	•	•
508	508 (RXH)	BSI (Built-in Systems Interface)	•	•	•	•	•
508	508 (RXH)	DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
508	508 (RXH)	DCP (Door Control Pad)	•	•	•	•	•
508	508 (RXH)	DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
508	508 (RXH)	ECM (Engine Control Module)	•	•	•	•	•
508	508 (RXH)	EPB (Electric Secondary Brake)	•	•	•	•	•
508	508 (RXH)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
508	508 (RXH)	ERU (Engine Relay Unit)	•	•	•	•	•
508	508 (RXH)	ESL (Electric Steering Lock)	•	•	•	•	•
508	508 (RXH)	HFC (Hands Free Control Kit)	•	•	•	•	•
508	508 (RXH)	HHV (High Head Vision)	•	•	•	•	•
508	508 (RXH)	HMS (Hybrid Mode Selector)	•	•	•	•	•
508	508 (RXH)	HYC-1 (Hybrid Control ECU 1)	•	•	•	•	•
508	508 (RXH)	HYC-2 (Hybrid Control ECU 2)	•	•	•	•	•
508	508 (RXH)	IP (Instrument Cluster Panel)	•	•	•	•	•
508	508 (RXH)	KEY (Electrionic Key Reader)	+ -	•	•	•	
508	508 (RXH)	MBA (Main Beams Assistant)	+ -	-	•		
	508 (RXH)		+ -	•	•	•	-
508		MCP (Multiplexed Control Panel)	_	<u> </u>			-
508	508 (RXH)	MSI (Matrix Screen Integral To The Instrument Panel)	•	•	•	•	•
508	508 (RXH)	MULD (Multifunction Display)	•	•	•	•	•
508	508 (RXH)	NAVI (Telematic Navigator)	•	•	•	•	•
508	508 (RXH)	PAM (Parking Assistance)	•	•	•	•	•
508	508 (RXH)	Radio RD5	•	•	•	•	•
508	508 (RXH)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
508	508 (RXH)	SM (Services Module)	•	•	•	•	•
508	508 (RXH)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
508	508 (RXH)	SRS (Airbag)	•	•	•	•	•
508	508 (RXH)	SWIC (Steering Wheel With Integral Controls (VCI))	•	•	•	•	•
508	508 (RXH)	SWSM (Switch Module Under The Steering Wheel(Top Of Column))	•	•	•	•	•
	508 (RXH)	TCM (Automatic Gearbox)	•	•	•	•	•
508							
508 508	508 (RXH)	TEU (Telematics Unit)	•	•	•	•	•
		TEU (Telematics Unit) TRU (Trailer Relay Unit)	•	•	•	•	•

508	508 (RXH)	VRD (Voltage Retaining Device)	1 •	•	•	•	•
508	508 (RXH)	Wiper-L (Windscreen Wiper (Left-hand Side))	•	•	•	•	
508	508 (RXH)	Wiper-R (Windscreen Wiper (Right-hand Side))	+ -	•	•	•	•
607	607 (CAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (CAN)	AC (Air Conditioning)	•	•	•	•	•
607	607 (CAN)	Alarm	 •	•	•	•	•
607	607 (CAN)	BSI (Built-in Systems Interface)	 •		<u> </u>	•	
607	607 (CAN)	CD (CD Player)	 •	•	•	•	•
607	607 (CAN)	DAF (Diesel Additive Control Unit)	•		•	•	
607	607 (CAN)	DDM (Driver's Door Module)	+ -	—		•	
607	607 (CAN)	DSMU (Driver's Seat Memory Unit)	 •	•	•	•	
607	607 (CAN)	ECM (Engine Control Module)	•	•	•	•	
607	607 (CAN)	EPS (Electric Power Steering GEP)	+ -	•	•		
607	607 (CAN)	HFC (Hands Free Control Kit)	+ -	-	-		
607	607 (CAN)	IP (Instrument Cluster Panel)	+ -	•	•	•	•
	607 (CAN)	MULS (Multifunction Screen)	+ -	•	-	•	
607			+ -	-		•	•
607	607 (CAN)	PAM (Parking Assistance)	+ -	•	-	•	•
607	607 (CAN)	PDM (Passenger's Door Module)	+ -				
607	607 (CAN)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
607	607 (CAN)	Radio	•	•	•	•	•
607	607 (CAN)	SRS (Airbag)	•	•	•	•	•
607	607 (CAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (CAN)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
607	607 (CAN)	TCM (AM6 Automatic Gearbox)	•	•	•	•	•
607	607 (CAN)	TCM (BVA ZF)	•	•	•	•	•
607	607 (CAN)	TEU (Telematics Unit)	•	•	•	•	•
607	607 (CAN)	UID (Under Inflation Detection)	•	•	•	•	•
607	607 (VAN)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
607	607 (VAN)	AC (Air Conditioning)	•	•	•	•	•
607	607 (VAN)	BSI (Built-in Systems Interface)	•	•	•	•	•
607	607 (VAN)	CD (CD Player)	•	•	•	•	•
607	607 (VAN)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
607	607 (VAN)	DDC (Driver's Door Control Panel)	•	•	•	•	•
607	607 (VAN)	DPOS (Storing Of The Driving Position)	•	•	•	•	•
607	607 (VAN)	ECM (Engine Control Module)	•	•	•	•	•
607	607 (VAN)	HLH (Headlamp Height Corrector)	•	•	•	•	•
607	607 (VAN)	IP (Instrument Cluster Panel)	•	•	•	•	•
607	607 (VAN)	MULS (Multifunction Screen)	•	•	•	•	•
607	607 (VAN)	PAM (Parking Assistance)	•	•	•	•	•
607	607 (VAN)	PDC (Passenger's Door Control Panel)	•	•	•	•	•
607	607 (VAN)	Radio	•	•	•	•	•
607	607 (VAN)	SRS (Airbag)	•	•	•	•	•
607	607 (VAN)	SSP (Electronically Managed Suspension)	•	•	•	•	•
607	607 (VAN)	TCM (Automatic Gearbox)	•	•	•	•	•
806		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
806		AH (Additional Heating)	•	•	•	•	•
806		ECM (Engine Control Module)	•	•	•	•	•
806		SRS (Airbag)	•	•	•	•	•
806		TCM (Automatic Gearbox)	•	•	•	•	•
807	807 (CAN) (2005 -)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
807	807 (CAN) (2005 -)	AC (Air Conditioning)	•	•	•	•	•
807	807 (CAN) (2005 -)	AH (Additional Heating)	•	•	•	•	•
807	807 (CAN) (2005 -)	Alarm	•	•	•	•	•
807	807 (CAN) (2005 -)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (CAN) (2005 -)	CD (CD Player)	 •	•	•	•	•
807	807 (CAN) (2005 -)	DAF (Diesel Additive Control Unit)	+ -	-		•	
807	807 (CAN) (2005 -)	DDM (Driver's Door Module)	 •	•	•	•	•
807	807 (CAN) (2005 -)	DSMU (Driver's Seat Memory Unit)	+ -	•	-	•	
807	807 (CAN) (2005 -)	ECM (Engine Control Module)	+ -	 			
807	807 (CAN) (2005 -)	EPS (Electric Power Steering GEP)	 •	•	-	•	
	807 (CAN) (2005 -)		 	 	 	•	
807	ou/ (CAN) (2005 -)	HFC (Hands Free Control Kit)	•				

907	907 (CAN) (900E)	III I.C. (I - f4 II - 11 - III - D - III I C - III - III C - III -	1	•	•	•	•
807	807 (CAN) (2005 -)	HLLC (Left Headlamp Beam Level Corrector)	+		⊢ -		_
807	807 (CAN) (2005 -)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	_
807	807 (CAN) (2005 -)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (CAN) (2005 -)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)	MULS (Multifunction Screen)	•	•	•	•	•
807	807 (CAN) (2005 -)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (CAN) (2005 -)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	RBS (Rain And Brightness Sensor)	•	•	•	•	-
807	807 (CAN) (2005 -)	Radio	•	•	•	•	•
807	807 (CAN) (2005 -)	SR-F (Front Sunroof)	•	•	•	•	-
807	807 (CAN) (2005 -)	SR-M (Middle Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 -)	SR-R (Rear Sunroof)	•	•	•	•	•
807	807 (CAN) (2005 -)	SRS (Airbag)	•	•	•	•	•
807	807 (CAN) (2005 -)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (CAN) (2005 -)	TCM (Automatic Gearbox)	•	•	•	•	•
807	807 (CAN) (2005 -)	TEU (Telematics Unit)	•	•	•	•	•
807	807 (CAN) (2005 -)	TRC (Telematic Receiver Control)	•	•	•	•	•
807	807 (CAN) (2005 -)	UID (Under Inflation Detection)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AC (Air Conditioning)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	AH (Additional Heating)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Alarm	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	BSI (Built-in Systems Interface)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	CD (CD Player)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DAF (Diesel Additive Control Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DDM (Driver's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	DPOS (Storing Of The Driving Position)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Display/Telematics	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	ECM (Engine Control Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	HLLC (Left Headlamp Beam Level Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	HLRC (Right Headlamp Beam Corrector)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Instrument Cluster Panel)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	IP (Warning Lights/Odometer Unit)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PAM (Parking Assistance)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	PDM (Passenger's Door Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	Radio	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SRS (Airbag)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SSDM (Sliding Side Doors Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
807	807 (VAN) (2002 - 2005)	TCM (Automatic Gearbox)	•	•	•	•	•
BIPPER	301 (HIII) (2002 2000)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BIPPER		BSI (Built-in Systems Interface)	•	•	•	•	•
BIPPER		ECM (Engine Control Module)	•	•	•	•	•
BIPPER		IP (Instrument Cluster Panel)	 •		-	•	
BIPPER		PAM (Parking Assistance)	+ -			•	
BIPPER		SRS (Airbag)	+ -			•	
BIPPER		TCM (Automatic Gearbox)	+ -			•	
BOXER	BOXER (1)	ECM (Engine Control Module)	+ -			•	
	BOXER (1)	TCM (Automatic Gearbox)	+ -			•	•
BOXER			+ -			_	_
BOXER	BOXER (3)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
BOXER	BOXER (3)	AC (Air Conditioning)	•	•	•	•	•
BOXER	BOXER (3)	AH (Additional Heating)	•	•	•	•	•
BOXER	BOXER (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER	BOXER (3)	ECM (Engine Control Module)	•	•	•	•	•
BOXER	BOXER (3)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER	BOXER (3)	IP (Instrument Cluster Panel)	•	•	•	•	<u> </u>
BOXER	BOXER (3)	LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER	BOXER (3)	PAM (Parking Assistance)	•	•	•	•	•
			_				
BOXER BOXER	BOXER (3) BOXER (3)	SRS (Airbag)	•	•	•	•	•

BOXER BOX	XER (3) XER (3) (Euro 5 / 6) XER (3) (Euro 5 / 6)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation) TG (Tachograph) ABS/ESP (Anti-lock brake System Or Electric Stability Program) AC (Air Conditioning) AH (Additional Heating) BSI (Built-in Systems Interface) ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System) PAM (Parking Assistance)	•	•	•	•	•
BOXER BOX	XER (3) (Euro 5 / 6)	ABS/ESP (Anti-lock brake System Or Electric Stability Program) AC (Air Conditioning) AH (Additional Heating) BSI (Built-in Systems Interface) ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER BOX	XER (3) (Euro 5 / 6)	AC (Air Conditioning) AH (Additional Heating) BSI (Built-in Systems Interface) ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER BOX	XER (3) (Euro 5 / 6)	AH (Additional Heating) BSI (Built-in Systems Interface) ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	•	•	•	•
BOXER BOX	XER (3) (Euro 5 / 6)	BSI (Built-in Systems Interface) ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	•		_	
BOXER BOX	XER (3) (Euro 5 / 6)	ECM (Engine Control Module) EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	•			
BOXER BOX	XER (3) (Euro 5 / 6)	EPS (Electric Power Steering) IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)	•	<u> </u>	•	•	
BOXER BOX BOXER BOX BOXER BOX BOXER BOX BOXER BOX BOXER BOX	XER (3) (Euro 5 / 6)	IP (Instrument Cluster Panel) LDWS (Lane Departure Warning System)			•	•	
BOXER BOX BOXER BOX BOXER BOX BOXER BOX BOXER BOX	XER (3) (Euro 5 / 6) XER (3) (Euro 5 / 6) XER (3) (Euro 5 / 6)	LDWS (Lane Departure Warning System)		<u> </u>			_
BOXER BOX BOXER BOX BOXER BOX BOXER BOX	XER (3) (Euro 5 / 6) XER (3) (Euro 5 / 6)		•	•	•	•	_
BOXER BOXER BOXER BOXER BOXER	XER (3) (Euro 5 / 6)	PAM (Parking Assistance)	•	•	•	•	-
BOXER BOXER BOX			•	•	•	•	•
BOXER BOX	YER (3) (Euro 5 / 6)	SRS (Airbag)	•	•	•	•	•
		SSP (Electronically Managed Suspension)	•	•	•	•	•
		TG (Tachograph)	•	•	•	•	•
		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
 		AC (Air Conditioning)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	AH (Additional Heating)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	BSI (Built-in Systems Interface)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	ECM (Engine Control Module)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	EPS (Electric Power Steering GEP)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	IP (Instrument Cluster Panel)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	PAM (Parking Assistance)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	SRS (Airbag)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	SSP (Electronically Managed Suspension)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
BOXER BOX	XER (3) (MiniBus)	TG (Tachograph)	•	•	•	•	•
EXPERT EXF	PERT (1)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT EXF	PERT (1)	AH (Additional Heating)	•	•	•	•	•
EXPERT EXF	PERT (1)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT EXF	PERT (1)	SRS (Airbag)	•	•	•	•	•
EXPERT EXF	PERT (1)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT EXF	PERT (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT EXF	PERT (2)	AC (Air Conditioning)	•	•	•	•	•
EXPERT EXF	PERT (2)	AH (Additional Heating)	•	•	•	•	•
-		ASM (Anti-slip Mode Selector)	•	•	•	•	•
	()	Alarm	•	•	•	•	•
		BSI (Built-in Systems Interface)	•	•	•	•	•
<u> </u>		CD (CD Player)	•	•	•	•	•
-		ECM (Engine Control Module)	•	•	•	•	•
h		EPS (Electric Power Steering GEP)	•	•	•	•	•
		HFC (Hands Free Control Kit)	•	•	•	•	•
-		IP (Instrument Cluster Panel)	•	•	•	•	•
		MULS (Multifunction Screen)	•	•	•	•	
<u> </u>			 •		•	•	-
		PAM (Parking Assistance) RBS (Rain And Brightness Sensor)			•	•	-
	` ′			<u> </u>			-
—		Radio	•	•	•	•	
		SRS (Airbag)	•	•	•	•	_
 		SSP (Pneumatic Suspension)	•	•	•	•	-
 		SWSM (Steering Wheel Switching Module)	•	•	•	•	-
		TCM (Automatic Gearbox)	•	•	•	•	•
 		TEU (Telematics Unit)	•	•	•	•	•
 		UID (Under Inflation Detection)	•	•	•	•	•
—		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
		AC (Rear Air Conditioning Table)	•	•	•	•	•
 		AH (Additional Heating)	•	•	•	•	•
EXPERT EXF	PERT (3)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT EXF	PERT (3)	BATT (Battery Charge Status Unit)	•	•	•	•	•
EXPERT EXF	PERT (3)	BSI (Built-in Systems Interface)	•	•	•	•	•
EXPERT EXF	PERT (3)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
EXPERT EXF	PERT (3)	CD (CD Player)	•	•	•	•	•
EXPERT EXF	PERT (3)	DD (Deflation Detection(Dsg))	•	•	•	•	•

	T	<u> </u>	_			I _	_ 1
EXPERT	EXPERT (3)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (3)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFC (Hands Free Control Kit)	•	•	•	•	•
EXPERT	EXPERT (3)	HFR (High Frequency Receiver)	•	•	•	•	•
EXPERT	EXPERT (3)	Heating/Ventilation	•	•	•	•	•
EXPERT	EXPERT (3)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (3)	MULD (Multifunction Display)	•	•	•	•	•
EXPERT	EXPERT (3)	PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (3)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
EXPERT	EXPERT (3)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (3)	SSP (Pneumatic Suspension)	•	•	•	•	•
EXPERT	EXPERT (3)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
EXPERT	EXPERT (3)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (3)	TEU (Telematics Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	AC (Rear Air Conditioning)	•	•	•	•	•
EXPERT	EXPERT (KO)	AH (Additional Heating)	•	•	•	•	•
EXPERT	EXPERT (KO)	ALM (Anti-theft Alarm)	•	•	•	•	•
EXPERT	EXPERT (KO)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
EXPERT	EXPERT (KO)	BATT (Battery Charge Status Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	BSI (Built-in Systems Interface)	•	•	•	•	•
EXPERT	EXPERT (KO)	DAF (Diesel Additive Pump)	•	•	•	•	•
EXPERT	EXPERT (KO)	Display	•	•	•	•	•
EXPERT	EXPERT (KO)	ECM (Engine Control Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	ERU (Engine Relay Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	ESL (Electric Steering Lock)	•	•	•	•	•
EXPERT	EXPERT (KO)	HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•
EXPERT	EXPERT (KO)	HHV (High Head Vision)	•	•	•	•	•
EXPERT	EXPERT (KO)	IP (Instrument Cluster Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	MCP (Multiplexed Control Panel)	•	•	•	•	•
EXPERT	EXPERT (KO)	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
EXPERT	EXPERT (KO)	NAVI (Telematic Navigator)	•	•	•	•	•
		NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio	_	-			_
EXPERT	EXPERT (KO)	System)	•	•	•	•	•
EXPERT	EXPERT (KO)	PAM (Parking Assistance)	•	•	•	•	•
EXPERT	EXPERT (KO)	RSS (Rain-sunlight Sensor)	•	•	•	•	•
EXPERT	EXPERT (KO)	Radio	•	•	•	•	•
EXPERT	EXPERT (KO)	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
EXPERT	EXPERT (KO)	SM (Services Module)	•	•	•	•	•
EXPERT	EXPERT (KO)	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	SRS (Airbag)	•	•	•	•	•
EXPERT	EXPERT (KO)	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWC (Controls On The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
EXPERT	EXPERT (KO)	Siren	•	•	•	•	•
EXPERT	EXPERT (KO)	TCM (Automatic Gearbox)	•	•	•	•	•
EXPERT	EXPERT (KO)	TRU (Trailer Relay Unit)	•	•	•	•	•
EXPERT	EXPERT (KO)	TS (Touch Screen)	•	•	•	•	•
EXPERT	EXPERT (KO)	VDA (Vehicle Distance Assistance)	•	•	•	•	•
EXPERT	EXPERT (KO)	VRD (Voltage Retaining Device)	•	•	•	•	•
HOGGAR		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
HOGGAR		AC (Air Conditioning)	•	•	•	•	•
HOGGAR		Alarm	•	•	•	•	•
HOGGAR		BSI (Built-in Systems Interface)	•	•	•	•	•
HOGGAR		CD (CD Player)	•	•	•	•	•
HOGGAR		Display/Telematics	•	•	•	•	•
HOGGAR		ECM (Engine Control Module)	•	•	•	•	•
HOGGAR		IP (Instrument Cluster Panel)	•	•	•	•	•
HOGGAR		RBS (Rain And Brightness Sensor)	•	•	•	•	•
HOGGAR		Radio	•	•			•
MOOOM	<u> </u>	nuato.					

HOGGAR		SM (Services Module)	Ι.	T •		•	•
HOGGAR		SM (Services Module) SRS (Airbag)	+ -		-	•	
HOGGAR		SKS (Airbag) SVLCU (Stolen Vehicle Location Control)	+ ÷		-	•	•
HOGGAR		SWSM (Steering Wheel Switching Module)	+ -	—	•	•	
HOGGAR		TCM (Automatic Gearbox)	+ -	•	•	•	•
HOGGAR		Wiper-L (Windscreen Wiper (Left-hand Side))	+ -		•	•	
ION		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	+ ÷	 	 	•	—
ION		AC (Air Conditioning)	+ -		•	•	
ION		*	+ -		-	•	_
ION		BATT (Onboard Charger Of The Traction Battery) BATT (Traction Battery ECU)	+ -			•	-
ION		•	+ -	-	 •	•	-
		BATT-01 (Traction Battery Cells Management (Module 01))	+	-		•	-
ION		BATT-02 (Traction Battery Cells Management (Module 02))	•	•	•		-
ION		BATT-03 (Traction Battery Cells Management (Module 03))	•	•	•	•	-
ION		BATT-04 (Traction Battery Cells Management (Module 04))	•	•	•	•	•
ION		BATT-05 (Traction Battery Cells Management (Module 05))	•	•	•	•	•
ION		BATT-07 (Traction Battery Cells Management (Module 07))	•	•	•	•	•
ION		BATT-08 (Traction Battery Cells Management (Module 08))	•	•	•	•	•
ION		BATT-09 (Traction Battery Cells Management (Module 09))	•	•	•	•	•
ION		BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	_
ION		BATT-11 (Traction Battery Cells Management (Module 11))	•	•	•	•	_
ION		DVT (Direct Voltage(DC/DC) Transformer)	•	•	•	•	•
ION		EMM (Electric Machine Management ECU)	•	•	•	•	•
ION		EPS (Electric Power Steering)	•	•	•	•	•
ION		EVM (Electric Vehicle Management ECU)	•	•	•	•	•
ION		GWH (Gateway Wiring Housing)	•	•	•	•	•
ION		IP (Instrument Cluster Panel)	•	•	•	•	•
ION		RPE (Radio Post-equipment)	•	•	•	•	•
ION		SAS (Steering Wheel Angle Sensor)	•	•	•	•	•
ION		SM (Services Module)	•	•	•	•	•
ION		SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (2)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (2)	AH (Additional Heating)	•	•	•	•	•
PARTNER	PARTNER (2)	Alarm	•	•	•	•	•
PARTNER	PARTNER (2)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (2)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (2)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (2)	IP (Instrument Cluster Panel)	•	•	•	•	•
PARTNER	PARTNER (2)	MULD (Multifunction Display)	•	•	•	•	•
PARTNER	PARTNER (2)	RBS (Rain And Brightness Sensor)	•	•	•	•	•
PARTNER	PARTNER (2)	Radio	•	•	•	•	•
PARTNER	PARTNER (2)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Steering Wheel Switching Module)	•	•	•	•	•
PARTNER	PARTNER (2)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	
PARTNER	PARTNER (2) (M69)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	
PARTNER	PARTNER (2) (M69)	BSI (Built-in Systems Interface)	+ -		-	•	
			+ ÷		 •		
PARTNER	PARTNER (2) (M69)	ECM (Engine Control Module) IP (Instrument Cluster Panel)	+ -	•	-	•	
PARTNER	PARTNER (2) (M69)	IP (Instrument Cluster Panel)	+ -	-	•	•	-
PARTNER	PARTNER (2) (M69)	Radio		-			
PARTNER	PARTNER (2) (M69)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (2) (M69)	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
PARTNER	PARTNER (B9)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER (B9)	AC (Air Conditioning Compressor)	•	•	•	•	•
PARTNER	PARTNER (B9)	AC (Air Conditioning)	•	•	•	•	•
PARTNER	PARTNER (B9)	ASM (Anti-slip Mode Selector)	•	•	•	•	•
PARTNER	PARTNER (B9)	Alarm	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Battery Charge Status Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-02 (Traction Battery Cells Management (Module 02))	•	•	•	•	•

r		T	T	_	ı	ī	Ī
PARTNER	PARTNER (B9)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-08 (Traction Battery Cells Management(Module 08))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER (B9)	BATT-10 (Traction Battery Cells Management(Module 10))	•	•	•	•	•
PARTNER	PARTNER (B9)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER (B9)	BWCU (Bodywork Conversion Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	CD (CD Player)	•	•	•	•	•
PARTNER	PARTNER (B9)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	EMM (Electric Machine Management ECU)	•	•	•	•	•
PARTNER	PARTNER (B9)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	ERU (Engine Relay Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	EVM (Electric Vehicle Management ECU)	•	•	•	•	•
PARTNER	PARTNER (B9)	HFC (Hands Free Control Kit)	•	•	•	•	•
PARTNER	PARTNER (B9)	HFR (High Frequency Receiver)	•	•	•	•	•
PARTNER	PARTNER (B9)	IP (Instrument Cluster Panel)	•			•	•
PARTNER	PARTNER (B9)	MAAP (Multiplexed Additive Adding Pump)	—			•	
PARTNER	PARTNER (B9)	MULD (Multifunction Display)	+ -			•	
PARTNER	PARTNER (B9)	PAM (Parking Assistance)	+ -			•	
			+ -			•	
PARTNER	PARTNER (B9)	PCAHR (Passenger's Compartment Air Heating Resistor)	+ -	<u> </u>	Ť		_
PARTNER	PARTNER (B9)	RS (Rain Sensor)	•	•	•	•	•
PARTNER	PARTNER (B9)	Radio	•	•	•	•	•
PARTNER	PARTNER (B9)	SM (Services Module)	•	•	•	•	•
PARTNER	PARTNER (B9)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER (B9)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
PARTNER	PARTNER (B9)	TCM (Automatic Gearbox)	•	•	•	•	•
PARTNER	PARTNER (B9)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER (B9)	TRU (Trailer Relay Unit)	•	•	•	•	•
PARTNER	PARTNER (B9)	UID (Under Inflation Detection)	•	•	•	•	•
PARTNER	PARTNER (B9)	VRD (Voltage Retaining Device)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	AC (Air Conditioning Compressor)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	Alarm	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT (Battery Charge Status Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT (Onboard Charger Of The Traction Battery)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-01 (Traction Battery Cells Management(Module 01))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-02 (Traction Battery Cells Management(Module 02))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-03 (Traction Battery Cells Management(Module 03))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-04 (Traction Battery Cells Management(Module 04))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-05 (Traction Battery Cells Management(Module 05))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-06 (Traction Battery Cells Management(Module 06))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-07 (Traction Battery Cells Management(Module 07))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-08 (Traction Battery Cells Management (Module 08))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-09 (Traction Battery Cells Management(Module 09))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BATT-10 (Traction Battery Cells Management (Module 10))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	BSI (Built-in Systems Interface)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ECM (Engine Control Module)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EMM (Electric Machine Management ECU)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EPS (Electric Power Steering Electric Pump Unit)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	ERU (Engine Relay Unit)	 •	•	•	•	•
PARTNER	PARTNER Electric (B9E)	EVM (Electric Vehicle Management ECU)	 •	-	-	•	•
PARTNER	PARTNER Electric (B9E)	IP (Instrument Cluster Panel)	+ -			•	•
PARTNER	PARTNER Electric (B9E)	MULD (Multifunction Display)	+ -			•	•
PARTNER	PARTNER Electric (B9E)		 •			•	•
		PAM (Parking Assistance)	 •	 		•	•
PARTNER	PARTNER Electric (B9E)	PCAHR (Passenger's Compartment Air Heating Resistor)	-	-			
PARTNER	PARTNER Electric (B9E)	RS (Rain Sensor)	 	•	•	•	•
PARTNER	PARTNER Electric (B9E)	Radio	•	<u> </u>	-	_	-
PARTNER	PARTNER Electric (B9E)	SM (Services Module)	•	•	•	•	

PARTNER	PARTNER Electric (B9E)	SRS (Airbag)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	SWSM (Switch Module Under The Steering Wheel(Top Of Colunm))	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	TEU/NAVI (Telematics Unit(Rtx) Or Radio-navigation)	•	•	•	•	•
PARTNER	PARTNER Electric (B9E)	VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
RCZ		AC (Air Conditioning)	•	•	•	•	•
RCZ		AMP (Audio Amplifier)	•	•	•	•	•
RCZ		Alarm	•	•	•	•	•
RCZ		Alarm Lin	•	•	•	•	•
RCZ		BATT (Battery Charge Status Unit)	•	•	•	•	•
RCZ		BSI (Built-in Systems Interface)	•	•	•	•	•
RCZ		CD (CD Player)	•	•	•	•	•
RCZ		CPDMD (Control Panel Dot Matrix Display)	•	•	•	•	•
RCZ		DBVHA (Discharge Bulbs Vertical And Horizontal Adjustment)	•	•	•	•	•
RCZ		DDC (Driver's Door Control Panel)	•	•	•	•	•
RCZ		DSM (Driver's School Module)	•	•	•	•	•
RCZ		DSMU (Driver's Seat Memory Unit)	•	•	•	•	•
RCZ		ECM (Engine Control Module)	•	•	•	•	•
RCZ		EPA (Electropump Assembly)	•	•	•	•	•
RCZ		EPS (Electric Power Steering)	•	•	•	•	•
RCZ	+	ERU (Engine Relay Unit)	•	•	•	•	•
RCZ	+	FR (Folding Roof)	•	•	•	•	•
RCZ	+	HFC (Hands Free Control Kit)	•	•	•	•	•
RCZ		HFR (High Frequency Receiver)	•	•	•	•	•
RCZ		IP (Instrument Cluster Panel)	•	•	•	•	•
RCZ		LDWS (Lane Departure Warning System)	•	•	•	•	•
RCZ		MAAP (Multiplexed Additive Adding Pump)	•	•	•	•	•
RCZ		MPD (Moving Panel Deflector)	•	•	•	•	•
RCZ		MULS (Multifunction Screen)	•	•	•	•	•
RCZ		N-TNB (Not Fastened Warning Light(Tnb))	•	+ •	•	•	•
RCZ RCZ	+	NAVI (Radio Navigation NG4)	•	•	•	•	•
RCZ		PAM (Parking Assistance) PID (Pedestrian Impact Detection)	+ -	+ -	•	•	
RCZ		PSM (Passenger's Seat Memorizing Unit)	+ ÷	+ -	 •	•	
RCZ		RBS (Rain And Brightness Sensor)	+ ÷	+ -	 		•
RCZ		Radio	+ -				
RCZ		SM (Services Module)	+ ÷	 •	•	•	•
RCZ		SRS (Airbag)	+ -	 •	—	•	•
RCZ		SWSM (Steering Wheel Switching Module)	-	 •	•	•	•
RCZ		SunRoof	•	•	•	•	•
RCZ		TCM (Automatic Gearbox)	•	•	•	•	•
RCZ	1	TEU (Telematics Unit)	•	•	•	•	•
RCZ		TRU (Trailer Relay Unit)	•	•	•	•	•
RCZ		UID (Under Inflation Detection)	•	•	•	•	•
RCZ		VRD (Voltage Retaining Device)	•	•	•	•	•
RCZ		Wiper (Windscreen Wiper)	•	•	•	•	•
TRAVELLER		ABS/ESP (Anti-lock brake System Or Electric Stability Program)	•	•	•	•	•
TRAVELLER		AC (Air Conditioning)	•	•	•	•	•
TRAVELLER		AC (Rear Air Conditioning Control Panel)	•	•	•	•	•
TRAVELLER		AC (Rear Air Conditioning)	•	•	•	•	•
TRAVELLER		AH (Additional Heating)	•	•	•	•	•
TRAVELLER		ALM (Anti-theft Alarm)	•	•	•	•	•
TRAVELLER		ASM (Anti-slip Mode Selector)	•	•	•	•	•
TRAVELLER		BATT (Battery Charge Status Unit)	•	•	•	•	•
TRAVELLER		BSI (Built-in Systems Interface)	•	•	•	•	•
TRAVELLER		DAF (Diesel Additive Pump)	•	•	•	•	•
TRAVELLER		Display	•	•	•	•	•
TRAVELLER		ECM (Engine Control Module)	•	•	•	•	•
TRAVELLER		ERU (Engine Relay Unit)	•	•	•	•	•
TRAVELLER		ESL (Electric Steering Lock)	•	•	•	•	•
TRAVELLER		HFA (Hands Full Access ECU(Right-hand Side Or Rear))	•	•	•	•	•

TRAVELLER	HHV (High Head Vision)	•	•	•	•	•
TRAVELLER	IP (Instrument Cluster Panel)	•	•	•	•	•
TRAVELLER	MCP (Multiplexed Control Panel)	•	•	•	•	•
TRAVELLER	MULC (Multifunction Video Camera (CMF))	•	•	•	•	•
TRAVELLER	NAVI (Telematic Navigator)	•	•	•	•	•
TRAVELLER	NAVI/TEU/CAS (Audio-navigation Or Telematic Unit Or Connected Audio System)	•	•	•	•	•
TRAVELLER	PAM (Parking Assistance)	•	•	•	•	•
TRAVELLER	RSS (Rain-sunlight Sensor)	•	•	•	•	•
TRAVELLER	Radio	•	•	•	•	•
TRAVELLER	SB (Seat Belts Not Fastened LED Unit(TNB))	•	•	•	•	•
TRAVELLER	SM (Services Module)	•	•	•	•	•
TRAVELLER	SPMU (Supply Protection And Management Unit)	•	•	•	•	•
TRAVELLER	SRS (Airbag)	•	•	•	•	•
TRAVELLER	SSDM (Left-hand Sliding Side Door)	•	•	•	•	•
TRAVELLER	SWC (Controls On The Steering Wheel)	•	•	•	•	•
TRAVELLER	SWSM (Switch Module Under The Steering Wheel)	•	•	•	•	•
TRAVELLER	Siren	•	•	•	•	•
TRAVELLER	TCM (Automatic Gearbox)	•	•	•	•	•
TRAVELLER	TRU (Trailer Relay Unit)	•	•	•	•	•
TRAVELLER	TS (Touch Screen)	•	•	•	•	•
TRAVELLER	VDA (Vehicle Distance Assistance)	•	•	•	•	•
TRAVELLER	VRD (Voltage Retaining Device)	•	•	•	•	•

PEUGEOT DPF Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Mode1	Model Type	DPF
1007	1007 (CAN)	•
2008		•
206	206	•
206	206 (Mux)	•
207	207 (CAN)	•
208	208	•
208	208 (Ai91)	•
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
307	307 (CAN) (2006.01 -)	•
307	307 (VAN) (- 2005.12)	•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
4007	4007	•
4008	4008	•
4008	4008 (CHINA)	•
407		•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
607	607 (CAN)	•
807	807 (CAN) (2005 -)	•
BOXER	BOXER (3) (Euro 5 / 6)	•
EXPERT	EXPERT (2)	•
EXPERT	EXPERT (3)	•
EXPERT	EXPERT (KO)	•
PARTNER	PARTNER (2) (M69)	•
PARTNER	PARTNER (B9)	•
RCZ		•
TRAVELLER		•
207	207 (+)	•

PEUGEOT DPF Function List (Note:For reference only)

Filling Of The Diesel Additive Adding	: Keservoır	
---------------------------------------	-------------	--

Forced Regeneration Of The Particle Emission Filter

Forced Regeneration Of The Particle Filter, Vehicle Stationary

Forced Regeneration Of The Particulate Filter While Driving

Forced Regeneration Vehicle Moving

Forced Regeneration Vehicle Stationary

Pariticle Filter Regeneration

Particulate Filter Replacement

Replacement Of The Diesel Additive Reservoir, Of The Pump Or Of The Pipes

Replacement Of The Differential Pressure Sensor

Replacement Of The Particle Emission Filter

Replacement Of The Particle Emission Filter Differential Pressure Sensor

PEUGEOT EPB Function List (Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Model	Model Type	EPB
3008	3008	•
3008	3008 (CHINA)	•
3008	3008 (Hybrid4)	•
3008	3008 (P84)	•
301		•
308	308 (2010.01 - 2014.09)	•
308	308 (4 Doors)	•
308	308 (S)	•
308	308 (T9) (2014.10 -)	•
308	308 (TX9)	•
4008	4008 (CHINA)	•
408	408 (2010.01 - 2014.09)	•
408	408 (T93) (2014.10 -)	•
5008	5008	•
5008	5008 (P84)	•
508	508	•
508	508 (Hybrid4)	•
508	508 (RXH Hybrid4)	•
508	508 (RXH)	•
EXPERT	EXPERT (KO)	•
PARTNER	PARTNER (B9)	•
PARTNER	PARTNER Electric (B9E)	•
RCZ		•
TRAVELLER		•

PEUGEOT EPB Function List (Note:For reference only)

Cable Tensioning

Deactivation Of The Automatic Application Of The Electric Parking Brake Function

Electric Parking Brake Calibration

First Activation Of The Electric Parking Brake

Put In Fitting/Removal Position

Reactivation Of Automatic Application Of The Electric Parking Brake

Release Of The Motorised Brake Calipers

Replacement Of The Brake Pads

Replacement Of The Electric Parking Brake (FSE) Left-hand Actuator

Replacement Of The Electric Parking Brake (FSE) Right-hand Actuator

Replacement Of The Proportional Brake Switch

Replacement Of The Rear Left Motorised Brake Caliper

Replacement Of The Rear Right Motorised Brake Caliper