RENAULT DPF Function List (Note:For reference only) NOTES: • This function is supported. * This function may be supported, which depends on the actual condition of the vehicle. O This function is not supported. lacktriangle This function is the new feature in this version. Model DPF ALASKAN AVANTIME CAPTUR/KAPTUR BR/IN/RU CAPTUR/QM3/KABIN CLIO III CLIO IV DOKKER DUSTER DUSTER PH2 DUSTER PH3 ESPACE IV ESPACE IV PH2/3/4 ESPACE V KADJAR KANGOO II KANGOO ZE/STOPSTART/PH2 KOLEOS II/QM6 KOLEOS/QM5 LAGUNA lacktriangleLAGUNA II LAGUNA II PH2 LAGUNA III LATITUDE/SM5 LOGAN LOGAN II/SANDERO II MASTER III MASTER PH 3 MEGANE II MEGANE III/SCENIC III MEGANE IV MEGANE IV SEDAN MODUS NEW SM3/FLUENCE/MEGANE SCENIC II SCENIC IV TALISMAN/SM6 TRAFIC II P2/3 TRAFIC III TWINGO II VEL SATIS VEL SATIS PH2 DPF Function List Particle Filter Pressure Diff. Sensor Adaptives After Replacing Cabin Filter Cabin Filter Regeneration Particle Filter Relative Pressure Sensor Adaptives After Regenerating Particle Filter Particle Filter Adaptives

Particle Filter

Particle Filter Regeneration

n List(Note:For reference only)					
ds on the actual condition of the vehicle.					
rsion.					
Mode1 EPB					
•					
•					
•					
•					
•					
•					
•					
LEOS II CN/QM6 CN LEOS II/QM6					
•					
KOLEOS/QM5 ULAGUNA II PH2					
•					
•					
•					
•					
•					
•					
•					
•					
•					
•					

EPB Function List

VEL SATIS
VEL SATIS PH2
XJA

Electrical Paking Brake Apply and Release

RENAULT ETC Function List (Note:For reference only) NOTES: • This function is supported. * This function may be supported, which depends on the actual condition of the vehicle. O This function is not supported. ▲ This function is the new feature in this version. Model ETC ALPINE A110 CAPTUR/KAPTUR BR/IN/RU CAPTUR/QM3/KABIN CLIO II PH6 • CLIO III CLIO IV DOKKER DUSTER DUSTER PH2 DUSTER PH3 ESPACE V KADJAR KADJAR CN KANGOO II KANGOO VLL KANGOO ZE/STOPSTART/PH2 KOLEOS II CN/QM6 CN KOLEOS II/QM6 KWID KWID BR LAGUNA III LATITUDE/SM5 LODGY LOGAN LOGAN II/SANDERO II MEGANE III/SCENIC III MEGANE IV MEGANE IV SEDAN MODUS • NEW SM3/FLUENCE/MEGANE SANDERO SCENIC IV TALISMAN/SM6 THALIA/SYMB. 2

ETC Function List

TWINGO II

TWINGO III

Programming Throttle Limits

XJA

RENAULT INJ Function List(Note:For reference only)

NOTES:

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

▲ This function is the new feature in this vers	sion.
Model	INJ
ALASKAN	•
ALPINE	•
AVANTIME	
CAPTUR/KAPTUR BR/IN/RU	
CAPTUR/QM3/KABIN	•
CLIO	
CLIO 2	
CLIO II P2/3/4	
CLIO III	
CLIO IV	
DOKKER	•
DUSTER	
DUSTER PH2	•
DUSTER PH3	
ESPACE	
ESPACE IV	•
ESPACE IV PH2/3/4	•
ESPACE V	•
EXTRA	•
KADJAR	•
KADJAR CN	•
KANGOO	
KANGOO II	•
KANGOO MUX	•
KANGOO ZE/STOPSTART/PH2	•
KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II PH2	•
LAGUNA III	
LAGUNA PHASE 2	
LATITUDE/SM5	
LODGY	
LOGAN II (CANDEDO II	
LOGAN II/SANDERO II	
MASTER	
MASTER III	
MASTER PH 2	
MASTER PH 3	•
MASTER RWD	•
MASTER RWD PH2	•
MASTER RWD PH3	
MEGANE II	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	•
MEGANE/SCENIC	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
R19	•
R21/SAVANNA	•
R25	•
SAFRANE	•
SANDERO	•
SCENIC II	•
SCENIC IV	
SPIDER	
SUPER 5	

TALISMAN/SM6	•
THALIA/SYMB. 2	•
THALIA/SYMBL	•
TRAFIC	•
TRAFIC II	•
TRAFIC II P2/3	•
TRAFIC III	•
TWINGO	•
TWINGO II	•
VEL SATIS	•
VEL SATIS PH2	•
XJA	•
Т	NJ Function List
1	NJ FUNCTION LIST
Injector Adaptives	
Cylinder Injector Code	
Injection Pump Adaptatives	
Fuel Pump Programming	
Injector Adaptives No 1, 2, 3, 4	
Enter Injector Codes	
Enter Injector Calibration Data	

ODO Function List (Note:For reference only)

NOTES:

• This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.▲ This function is the new feature in this version.

This function is the new feature in this vers	ion.
Model	ODO
APTUR	•
CAPTUR/QM3/KABIN	•
CLIO III	•
CLIO IV	•
SPACE IV	•
SPACE IV PH2	•
ANGOO II	•
ANGOO ZE/STOPSTART/PH2	•
OLEOS/QM5	•
WID	•
AGUNA	•
AGUNA II	•
AGUNA II PH2	•
AGUNA III	•
AGUNA PHASE 2	•
ATITUDE/SM5	•
ASTER III	•
EGANE II	
EGANE III/SCENIC III	
IODUS	
EW SM3/FLUENCE/MEGANE	
CENIC II	
M7 - L47	
RAFIC II P2	
RAFIC III	
WINGO III	
EL SATIS	
EL SATIS PH2	
IND	
CLIO V	
OE	
RKANA CN	
CAPTUR II CN	
CAPTUR II	
TITY K-ZE	
SPACE V PH2	
EGANE IV PH2	
EW KANGOO LS	
IEW SANDERO/LOGAN	
KIDDK	
ALISMAN/SM6 PH2 RIBER	Function List

Language Configuration

Language Version

RENAULT OIL Function List (Note: For reference only)

NOTES:

• This function is supported.

O This function is not supported.

▲ This function is the new feature in this version.

▲ This function is the new feature in this v	
Model	OIL
ALPINE A110	•
CLIO 2	•
CLIO III	•
DUSTER PH3	•
ESPACE	•
ESPACE IV	•
ESPACE IV PH2/3/4	•
ESPACE V	•
KADJAR	•
KADJAR CN	•
KANGOO II	•
KANGOO ZE/STOPSTART/PH2	•
KOLEOS II CN/QM6 CN	•
KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II	•
LAGUNA II PH2	•
LAGUNA III	•
LAGUNA PHASE 2	•
LATITUDE/SM5	•
MASTER III	•
MASTER RWD PH2	•
MEGANE II	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
SCENIC II	•
SCENIC IV	•
SM7 - L47	•
TALISMAN/SM6	•
THALIA/SYMBL	•
TRAFIC II P2/3	•
TWINGO II	•
TWINGO III	•
VEL SATIS	•
VEL SATIS PH2	•
	OTL D

OIL Function List

Distance Before Next Oil C	Change
----------------------------	--------

- Oil Change Interval In Km
- Oil Change Range: Current Value In Km
- Oil Change Interval In Months
- Oil Change Range:current Value In Months
- Oil Change Interval In Miles
- Oil Change Range:current Value In Miles

Personalised Oil Change Frequency

Distance Before Next Oil Change Configuration

RENAULT SAS Function List (Note: For reference only) NOTES: \bullet This function is supported. O This function is not supported. ▲ This function is the new feature in this version. Mode1 ALPINE A110 AVANTIME CAPTUR/KAPTUR BR/IN/RU CAPTUR/QM3/KABIN CLIO II P2/3/4 CLIO III CLIO IV DOKKER DUSTER PH2 lacktriangleDUSTER PH3 ESPACE IV lacktrianglelacktriangleESPACE IV PH2/3/4 • ESPACE V • KADJAR KADJAR CN KANGOO II KANGOO ZE/STOPSTART/PH2 lacktriangleKOLEOS II CN/QM6 CN lacktriangleKOLEOS II/QM6 KOLEOS/QM5 LAGUNA III LATITUDE/SM5 lacktriangleLODGY LOGAN II/SANDERO II lacktriangleMASTER III lacktriangleMASTER PH 3 • MEGANE II MEGANE III/SCENIC III lacktriangleMEGANE IV MEGANE IV SEDAN MEGANE/SCENIC lacktriangleMODUS NEW SM3/FLUENCE/MEGANE lacktrianglelacktriangleSCENIC II • SCENIC IV • SM7 - L47 TALISMAN/SM6 TRAFIC II P2/3 TRAFIC III lacktriangleTWINGO II lacktrianglelacktriangleTWINGO III VEL SATIS lacktriangleVEL SATIS PH2 WIND XJA ZOE SAS Function List Steering Wheel Angle Offset Sensor

Steering Wheel Angle Sensor Programming

Steering Wheel Angle Sensor

Steering Angle Sensor Initialisation

Steering Angle Offset

TPM Function Lis	t(Note:For reference only)
NOTES:	
• This function is supported.	
* This function may be supported, which depend	s on the actual condition of the vehicle.
O This function is not supported.	
▲ This function is the new feature in this ver	sion.
Model	TPM
AVANTIME	•
CLIO III	•
ESPACE IV	•
ESPACE IV PH2/3/4	•
ESPACE V	•
KADJAR CN	•
KOLEOS II CN/QM6 CN	•
KOLEOS II/QM6	•
KOLEOS/QM5	•
LAGUNA	•
LAGUNA II	•
LAGUNA II PH2	•
LAGUNA III	•
LATITUDE/SM5	•
MEGANE II	•
MEGANE III/SCENIC III	•
MEGANE IV	•
MEGANE IV SEDAN	•
MODUS	•
NEW SM3/FLUENCE/MEGANE	•
SCENIC II	•
SCENIC IV	•
SM7 - L47	•
TALISMAN/SM6	•
VEL SATIS	•
VEL SATIS PH2	•
TPM	Function List
Enter Recommended Pressures	
Programming A Valve Code	
Programming The Codes Of The Four Valves	
Read Valve Set And Memorised Codes	

RENAULT BLD Function	List(Note:For reference only)
NOTES:	
● This function is supported.	
* This function may be supported, which depend	s on the actual condition of the vehicle.
O This function is not supported.	
▲ This function is the new feature in this ver	sion.
Mode1	BLD
CLI0	•
CLIO 2	•
CLIO II P2/3/4	•
CLIO II PH6	•
CLIO III	
DUSTER	•
KANGOO II	•
KANGOO MUX	•
KANGOO VLL	•
LOGAN	•
MASTER III	•
MASTER RWD PH3	•
MEGANE II	•
MODUS	•
R19	•
SAFRANE	•
SANDERO	•
SCENIC II	•
THALIA/SYMB. 2	•
THALIA/SYMBL	•
TRAFIC II P2/3	•
TWINGO	•
TWINGO II	•
TWINGO PHASE 2	•
WIND	•
BLD	Function List
Bleed Hydraulic Unit And Braking Circuits	
Bleeding The Braking System	

RENAULT BMS Function Lie	st(Note:For reference only)
NOTES:	
This function is supported.	
* This function may be supported, which depends on	the actual condition of the vehicle.
O This function is not supported.	
▲ This function is the new feature in this version	
Mode1	BMS
CAPTUR/KAPTUR BR/IN/RU	•
CLIO II PH6	•
DUSTER	•
DUSTER PH3	•
KANGOO	•
KANGOO VLL	•
KANGOO ZE/STOPSTART/PH2	•
LAGUNA III	•
LOGAN	
LOGAN II/SANDERO II	•
MASTER III	
MASTER PH 3 MEGANE III/SCENIC III	
MEGANE IV	
NEW SM3/FLUENCE/MEGANE	
SANDERO	•
SCENIC IV	•
THALIA/SYMB. 2	•
TWINGO III	•
TWIZY	•
XJA	•
ZOE	•
BMS Fun	action List
Autonomy Battery	
Battery Corrosion Counter	
Calculate Battery Wear Counters	
Corrosion Battery Counter Memorised	
Corrosion Battery Counter Estimated	
Battery Cycle Counter Memorised	
Battery Cycle Counter Estimated	
Battery Cycle Counter	
Timed + Batt	
100 Ah Traction Battery	
Change Battery Compartment	
Battery Filling Reinitialisation	
Internal Battery	
Traction Battery Relay	

RENAULT Diagnostic Function List(Note:For reference only)

NOTES:

- lacktriangle This function is supported.
- This function may be supported, which depends on the actual condition of the vehicle. This function is not supported.
- ▲ This function is the new feature in this version.

	the new feature in this version.					
Model	Systemlist	EcuInfo.	ReadCodes	EraseCodes		ActTest
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
ALASKAN	IC (Instrument Cluster)		-		•	
ALASKAN	AC (Air Conditioning)	•	-	•	•	•
	4 Wheels Drive			•		
	Front Radar	•	•	•	•	0
	Parking Prox Can UCH					0
	UPC			•		
ALPINE	Petrol Injection			-		
ALL THE	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)	•		•	•	•
	Airbag	•		•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
11 0 7 11 1 1 1 1 1	Adaptation Unit	•	•	•	•	0
ALPINE A110	Communications Unit	•	•	•	•	0
	Hands-Free Module	•	•	•	•	Ö
	Parking Prox Can	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	*
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	*
ARKANA	Central Gateway	•	•	•	•	*
	Amplifier	•	•	•	•	*
	Around View Monitoring	•	•	•	•	*
	Blind Spot Detection	•	•	•	•	*
	Communications Unit	•	•	•	•	*
	Hands-Free Module	•	•	•	•	*
	Radio	•	•	•	•	*
	Scene Recorder	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Variable P. A. S	-	•	•	•	0
	Diesel Injection		-	•	•	•
	Petrol Injection		-		-	•
	ECM (Engine Control Module)			•		•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System) Airbag		•			
AVANTIME	IC (Instrument Cluster)			-		•
	AC (Air Conditioning)					
	Engine Immobiliser					
	Lighting					0
	Heater			•		•
	Interconnection Unit			•		•
	ECM (Engine Control Module)	•		•	•	•
	TCM (Transmission Control Module)	•		•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Lighting	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
I A DOWNED	Amplifier	•	•	•	•	0
KAPTUR	Communications Unit	•	•	•	•	Ö
	Hands Free Kit	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	•
		. —	. —			

	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•		•	•	
	Variable P.A.S					
	ECM (Engine Control Module)	•		•	•	•
	TCM (Transmission Control Module)	•		•	•	•
	ABS (Anti-Lock Braking System)			•	•	•
	SRS (Supplemental Inflatable Restraint System)	•		•	•	•
	IC (Instrument Cluster)	•		•	•	•
	AC (Air Conditioning)	•		•		
	BMS 12V	•	•	•	•	
	BMS Safety	•		-	-	
	BMS Safety				-	_
					-	
	Parking Brake			•	•	
	Parking Prox Can		•	•	•	•
	UCH			•	•	•
	UPC	•		•	-	
	EVC		-	-		•
	BCB	•	-		•	•
	BSG	•	•			•
	Central Gateway	•	•	•	•	0
	Amplifier	•	•	•	•	0
	Around View Monitoring	•	•	•	•	•
CAPTUR II	Brake Booster	•	•	•	•	•
	Check Chassis	•	•	•	•	•
	Communications Unit	•	•	•	•	<u> </u>
	Driving Assistance Supervisor	•	•	•	•	•
	Electric Traction Motor	•	•	•	•	•
	Front Camera	•	•	•	•	•
	Front Radar	•	•	•	•	•
	Gearbox Elec Control	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Left Rear Side Radar	•	•	•	•	•
	Right Rear Side Radar	•	•	•	•	•
	Multimedia Interface	•	•	•	•	*
	Radio	•	•	•	•	•
	Sealed Fuel Tank	•	•	•	•	*
	Supervisor	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Telephone Induction Charger	•	•	•	•	•
	Traction Control Unit	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
	Vehicle Sound For Pedestrian	•	•	•	•	•

	Page (2. 1. 2. 1.1.1.)					
	ECM (Engine Control Module)	•	•	•	•	
	TCM (Transmission Control Module)	•				
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)					
		-				
	AC (Air Conditioning) Lighting					
CADWID /						
CAPTUR/ QM3/	Amplifier	_				
KABIN	Communications Unit					
11112111	Hands Free Kit	_				
	Multimedia Interface	•				
	Parking Prox Can	•		-	_	0
	Radio	•		-	_	
	Telematic Ctrl Unit	_				0
	UCH	•		•	_	•
	UPC	•	•	+	•	
	Variable P. A. S	-	-:-		•	
	ABS (Anti-Lock Braking System)	-			_	
	SRS (Supplemental Inflatable Restraint System)				-	-
	IC (Instrument Cluster)	•	•	•	•	•
	BMS	•		-	•	
	Central Gateway	•		-	•	0
	UCH	•				
CITY K-ZE	UPC		•	•	•	_
	EVC	•			•	
	PEB	•	•	•	•	•
	Radio	•	•	•	•	•
	Supervisor	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Variable P.A.S	•	•	•	•	•
	Vehicle Sound For Pedestrian	•	•	•	•	•
	Petrol Injection	•	<u> </u>	•	•	•
	TCM (Transmission Control Module)	•	<u> </u>	•	•	•
CLIO	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
CLIO 2	Airbag	•	•	•	•	•
0210 2	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Gas Inj	•	•	•	•	•
	Interconnection Unit	•	•	•	•	0
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
CLIO II P2/3/4	AC (Air Conditioning)	•	•	•	•	•
OLIO 11 12/5/4	Engine Immobiliser	•	•	•	•	
	Discharge Lamp	•	•	•	•	0
	Gas Inj	•	•	•	•	•
	Interconnection Unit	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
CLIO II PH6	Airbag	•	•	•	•	•
	Tracker	•	•	•	•	0
	UCH	•	•	•	•	•
		•	•	•	•	•
	ECM (Engine Control Module)	_		•	•	•
		•				
	TCM (Transmission Control Module)	•	•	•	•	_
	TCM (Transmission Control Module) ABS (Anti-lock Braking System)	•	•		•	
	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag	•	•		•	•
	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster)	•	•		•	•
	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning)	•	•	•		
	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring)		•	•	•	•
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting		•	•	•	•
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit		•	•	•	•
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit Multimed. Connection		•		•	0
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit Multimed. Connection Multimedia Interface		•	•	•	•
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit Multimed. Connection Multimedia Interface Parking Assistance		•		•	0
CLIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit Multimed. Connection Multimedia Interface Parking Assistance Radio		•		•	
CFIO III	TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) TPM (Tire Pressure Monitoring) Lighting Communications Unit Multimed. Connection Multimedia Interface Parking Assistance		•		•	0

	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Lighting	•	•	•	•	•
a	Amplifier	•	•	•	•	•
CLIO IV	Communications Unit	•		•	•	0
	Hands Free Kit	•		•	•	•
	Parking Prox Can					0
	Radio					
	Telematic Ctrl Unit					-
	UCH		•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•		•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	BMS	•	•	•	•	•
	BMS 12V	•	•	•	•	•
	BMS Safety	•		•	•	-
	Central Gateway	-				
						•
	Electric Traction Motor					+
	Traction Control Unit		•	•	•	• •
	Amplifier	•	•	•	•	*
	Around View Monitoring	•	•	•	•	*
	Check Chassis	•	•	•	•	*
	Brake Booster	•	•	•	•	*
	Communications Unit	•	•	•	•	0
CLIO V	Driving Assistance Supervisor	•	•	•	•	•
	Front Camera	•		•	•	*
	Front Radar	•	•	•	•	*
	Hands-Free Module	•	•	•	•	•
	Left Rear Side Radar	•	•	•	•	•
	Multimedia Interface	•	•	•	•	*
	Parking Prox Can	•		•	•	•
	Radio	•			•	•
	Right Rear Side Radar	•		•	•	•
	Supervisor			•	•	•
	Telematic Ctrl Unit			•		*
	Telephone Induction Charger					*
					 	•
	UCH				+ =	-
	UPC		•	-	<u> </u>	-
	BSG	•	•	•	•	•
	EVC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	Vehicle Sound For Pedestrian	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	Airbag	•	•	•	•	•
CLIO V6	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Interconnection Unit	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	AC (Air Conditioning)	•	•		•	•
CLIO V6 PH 2	Engine Immobiliser		•	•	•	•
						0
	Interconnection Unit					
	ECM (Engine Control Module)		•	+	•	•
	ABS (Anti-lock Braking System)			•		•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	Hands Free Kit	•	•	•	•	0
DOKKER	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	0
	Variable P. A. S					_
						•
	ECM (Engine Control Module)			+		-
	TCM (Transmission Control Module)	•		•	•	
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
DUSTER		•		•	•	

	Radio	•	•	•	•	•
	Tracker	•	•	•	•	•
	UCH	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
DUSTER PH2	4 Wheels Drive	•	•	•	•	•
	Hands Free Kit	•	•	•	•	•
	Multimedia Interface	•	•	•	•	0
	Radio	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•

	ECM (Engine Control Module)		•			
	TCM (Transmission Control Module)	•	•		•	
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
	Around View Monitoring	•	•	•	•	•
	Blind Spot Detection	•	•	•	•	•
DUSTER PH3	Communications Unit	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	•
	Scene Recorder	•	•	•	•	0
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	0
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
ESPACE	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	0
	Lighting	•	•	•	•	•
	Discharge Lamp	•	•	•	•	•
	Heater	•	•	•	•	•
	Interconnection Unit	•	•	•	•	0
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
ESPACE IV	Parking Brake	•	•	•	•	•
	Discharge Lamp	•	•	•	•	•
	Hands Free Kit	•	•	•	•	0
	Heater	•	•	•	•	0
	Parking Assistance	•	•	•	•	•
	Radio	•	•	•	•	•
	UCH	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
DODAGD TV PVO /2 /:	Lighting	•	•	•	•	•
ESPACE IV PH2/3/4	Communications Unit	•	•	•	•	•
	Heater	•	•	•	•	•
	Multimed. Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Assistance	•	•	•	•	0
	Parking Prox	•	•	•	•	0
	Radio	•	•		•	•
	UCH	•	•	•	•	•
	Variable P.A.S	•	•	•		•

	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	4 Wheels Steering					
				<u> </u>		
	Amplifier			•	•	
	Front Camera	•	•	•	•	0
	Front Radar	•	•	•	•	O
	Gearbox Elec Control	•	•	•	•	•
ESPACE V	Left-Hand Door	•	•	•	•	
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Piloted Suspension	•	•	•	•	0
	Power Back Door	•		•	•	•
	Radio	•	•	•	•	
		-	-		•	
	Right-Hand Door			+ <u>-</u>		
	Seat Management	•	•	•	•	0
	Telematic Ctrl Unit	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	4 Wheels Steering	•	•	•	•	•
				•		
	ABS (Anti-Lock Braking System)		•		•	
	SRS (Supplemental Inflatable Restraint System)					
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Central Gateway	•	•	•	•	*
	Adaptive Driving Beam Left	•	•	•	•	•
	Adaptive Driving Beam Right	•	•	•	•	•
	Adaptive Driving Beam Unit	•	•	•	•	•
				•		*
	Amplifier					
	Check Chassis			-	-	*
	Communications Unit	•	•	•	•	*
	Driving Assistance Supervisor	•	•	•	•	•
ESPACE V PH2	Front Camera	•	•	•	•	•
	Front Radar	•	•	•	•	•
	Gearbox Elec Control	•	•	•	•	
	Hands-Free Module	•	•	•	•	*
	Head Up Display	•	•	•	•	*
	Left Rear Side Radar	•	•	•	•	•
	Right Rear Side Radar	•	•	•	•	
			•	•	•	
	Left-Hand Door					
	Right-Hand Door	•	•	•	•	•
	Power Back Door	•	•	•	•	•
	Seat Management	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Piloted Suspension	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Telephone Induction Charger	•	•	•	•	*
	Urea Dosing Control Module	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	Petrol Injection		•	•		
			•			
EXTRA	TCM (Transmission Control Module)					
	Airbag	•	•	•	•	0
	Engine Immobiliser	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	<u> </u>	•	•	•	•
		-	-			
	Parking Brake			-		
	4 Wheels Drive	•	•	•	•	0
	Amplifier	•	•	•	•	•
KADJAR	Front Camera	•	•	•	•	•
	Front Radar	•	•	•	0	0
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	
	raiking riox can	•	•		_	•
	Radio	•	•	•		

	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
KADJAR CN	Amplifier	•	•	•	•	•
	Front Camera	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	Radio	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•

EXP (Transmission Convert Module)				_			
ACATO CONSISTANCE ACAT							
Marting							
ANACO Material Associated							
Bath Barbol Bear			•	•		<u> </u>	•
Restore	KANGOO		•	•	•	•	•
Interconnection Units Insertion		Gas Inj	•	•			•
Inverter			•	•		<u> </u>	
Supervisor						_	
DW (Grapic Control Modelo)							
Time			•	•	•	•	•
Activate			•	•	•	•	•
I.C. (Instrument Clustery)		ABS (Anti-lock Braking System)	•	•	•	•	•
W. CARY Constitutioning		Airbag	•	•	•	•	•
RANKOO II			•	•			•
Magnation finit							
Communications Unit Whitined. Connection Whitined. Connection Whitined. Connection Whitined. Connection Whitined. Interface Parking Assistance Connection Whitined. C							
Malitimedia Interface	KANGOO II		•	•	•	•	•
Parting Assistance			•	•	•	•	•
RANGOO MIX RESERTED RESERTE		Multimedia Interface	•	•	•	•	•
Telematic Ctrl Unit Ctrl		Parking Assistance	•	•	•	— <u> </u>	•
CIT			•	•		•	•
IPC			•			-	
Name						_	
			•	•	•	•	•
TOL (Transmission Control Module)			•	•	•	•	•
RANGOO MIX			•	•	•	•	•
Airbag		TCM (Transmission Control Module)	•	•	•	•	•
Engine Immobiliser	KANGOO MUX		•	•			•
Interconnection Unit			•	•		<u> </u>	
E.M. (Engine Control Module) ARS (Anti-lock Braking System) Airbag						_	
ABS (Anti-lock Braking System)			•	•	•	•	•
Tracker			•	•	•	•	•
Tracker	KANGOO VII	Airbag	•	•	•	•	•
Variable P.A.S	MINOCO VEE		•	•		 	0
ECM (Engine Control Module)			•	•		<u> </u>	•
TCM (Transmission Control Module)			•				•
ABS (Anti-lock Braking System)							
Airbag			•	•	•	•	•
AC (Air Conditioning)			•	•	•	•	•
PEB PEB		IC (Instrument Cluster)	•	•		•	•
TPM (Tire Pressure Monitoring)			•	•			
BMS BMS Safety							_
RANGOO ZE/ STOPSTART/PH2 BCB							
Adaptation Unit BCB			•				
Charge Controller			•	•	•	•	•
Communications Unit EVC Heater Multimed. Connection Multimedia Interface Multim		BCB	•	•	•	•	•
EVC						 	
Heater	STOPSTART/PH2						
Multimed. Connection			-			 	
Multimedia Interface			-				
Parking Assistance			_				
Radio			•	•		•	•
Telematic Ctrl Unit		Parking Prox Can	•	•	•	•	0
UCH			•	•	•	•	•
UPC							
Urea Dosing Control Module						 	
Variable P.A.S				_ <u> </u>			
ECM (Engine Control Module)			•	•		- I	— <u> </u>
SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) UCH UPC Central Gateway Communications Unit Hands-Free Module Parking Prox Can			•	•	•	•	•
IC (Instrument Cluster)		ABS (Anti-Lock Braking System)	•	•	•	•	•
UCH			•	•	•	•	•
NEW KANGOO LS UPC Central Gateway Communications Unit Hands-Free Module Parking Prox Can UPC ** ** ** ** ** ** ** ** **				•			•
NEW KANGOO LS Central Gateway Communications Unit Hands-Free Module Parking Prox Can Section 1 Section 2						 	
Communications Unit Hands-Free Module Parking Prox Can Communications Unit ** ** ** ** ** ** ** ** **							
Hands-Free Module ● ● ※ Parking Prox Can ● ● ●	NEW KANGOO LS		_				
Parking Prox Can			_				
			•	•	•	•	_
			•	•	•	•	•

Urea Dosing Control Module		
	_	
Variable P.A.S	•	•

						_
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Front Camera			•		0
KOLEOS II CN/	Front Radar					0
QM6 CN						
	Left-Hand Door			•	-	•
	Multimedia Interface	•		•	•	•
	Parking Prox Can	•		•	•	•
	Power Back Door	•	•	•	•	•
	Radio	•	•	•	•	•
	Seat Management		•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)					•
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•		•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Front Camera	•	•	•	•	0
KOLEOS II/	Front Radar	•	•	•	•	0
QM6	Left-Hand Door			•		•
4			-	•	•	•
	Multimedia Interface		-		_	
	Parking Prox Can				-	
	Power Back Door	•		•	•	•
	Radio	•	•	•	•	•
	Seat Management	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)		•	•	•	0
	ABS (Anti-lock Braking System)					•
					 	
	Airbag				+ =	
	IC (Instrument Cluster)	-		•	•	•
	Parking Brake	•		•	•	•
	TPM (Tire Pressure Monitoring)	•	<u> </u>	•	•	•
	Auto Front Lighting	•	•	•	•	•
	Discharge Lamp	•	•	•	•	•
WOLDOO!	4 Wheels Drive	•	•	•	•	0
KOLEOS/	Amplifier	•	•	•	•	•
QM5	Blind Spot Detection	•	•	•	•	•
	Communications Unit		-		*	0
			-		•	•
	Multimed. Connection			_	+	_
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Radio	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
KWID	IC (Instrument Cluster)		-	•	•	•
II.II			•	•	•	•
	Radio					
	UCH	•	•	•	•	•
	Variable P.A.S		•	•		

	· ·					1 -
	ECM (Engine Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
KWID BR	IC (Instrument Cluster)	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	•
	UCH	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	Diesel Injection	•	•	•	•	•
	Petrol Injection	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
LAGIDIA	ABS (Anti-lock Braking System)	•	•	•	•	•
LAGUNA	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	-	•
	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Driver's Position		•	—	+ ÷	
	Variable P. A. S		•	—	+ ÷	0
	ECM (Engine Control Module)		_	_	_	_
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)		•	•		•
	Airbag	•	•	•	•	•
LAGUNA II	IC (Instrument Cluster)	•	•	•	-	_
	AC (Air Conditioning)	•	•	•	•	0
	Discharge Lamp	•	•	•	•	0
	Heater	•	•	•	•	•
	Parking Assistance	•	•	•	•	•
	UCH	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
LAGUNA II PH2	Parking Brake	•	•	•	•	•
	Lighting	•	•	•	•	•
	Communications Unit	•	•	•	•	0
	Hands Free Kit	•	•	•	•	0
	Heater	•	•	•	•	0
	Parking Assistance	•	•	•	•	•
	UCH	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Lighting	•	•	•	•	•
	4 Wheels Steering	•	•	•	•	0
	Amplifier	•	•	•	•	•
	Communications Unit	•	•	•	•	0
LAGUNA III	Driver's Door	•	•	•	•	•
	Left-Hand Door	•	•	•	•	•
	Multimed. Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Passenger's Door	•	•	•	•	•
	Radio	•	•	•	•	•
	Right-Hand Door	•	•	•	•	•
	Seat Management	•	•	•	•	•
					•	•
	Telematic Ctrl Unit		•	•		
	Telematic Ctrl Unit UCH		•	•	•	•
				_		

	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
LAGUNA PHASE 2	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	0
	Engine Immobiliser	•	•	•	•	•
	Driver's Position		•	-	•	•
	Gas Inj	•		-	•	-
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•			
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System) Airbag					
	IC (Instrument Cluster)					
	AC (Air Conditioning)					
	Parking Brake	•	•	•	•	•
	Lighting	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Blind Spot Detection	•	•	•	•	0
	Communications Unit	•	•	•	•	•
LATITUDE/	Driver's Door	•	•	•	•	•
SM5	Left-Hand Door	•	•	•	•	•
	Multimed. Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	Passenger's Door	•	•	•	•	•
	Radio	•	•	•	•	•
	Right-Hand Door	•	•	•	•	•
	Seat Management	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
, op av	IC (Instrument Cluster)	•	•	•	•	•
LODGY	Hands Free Kit	•	•	•	•	0
	Multimedia Interface		•	-	-	•
	Radio		•	-	•	•
	UCH	•	•	•	•	-
	Urea Dosing Control Module	•		-	•	•
	Variable P. A. S					-
	ECM (Engine Control Module)					-
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
LOGAN	Airbag		-			0
LOOMY	Gas Inj Radio	-	-			•
			•			•
	Tracker UCH	-	-			
	Variable P. A. S	•	•			
	ECM (Engine Control Module)					•
	TCM (Transmission Control Module)	•				
	ABS (Anti-lock Braking System)	•				
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Communications Unit	•	•	•	•	•
LOGAN II/	Hands Free Kit	•	•	•	•	•
SANDERO II	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	Tracker	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	4 Wheels Drive	•	•	•	•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	UCH	•	•	•	•	•

	UPC	•	•	•	•	•
	BSG	•	•	•	•	*
NEW SANDERO/LOGAN	Central Gateway	•	•	•	•	•
	BMS 12V	•	•	•	•	•
	Around View Monitoring	•	•	•	•	•
	Communications Unit	•	•	•	•	*
	Driving Assistance Supervisor	•	•	•	•	•
	Front Radar	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Radio	•	•	•	•	•
	Telematic Control Unit	•	•	•	•	*
	Variable P.A.S	•	•	•	•	*

WASTER IVD PRIS WASTER IVD		Pay (P. 1. a. 1. N. 1.1.)					
MATPOR		ECM (Engine Control Module)	•	•	•	•	
Regime lumbilities							
International Control Media	MASTER						
Filode Suspension			+ +			_	
MASTER FOLD			+ +				
MASTER RD PIS MAST			+ +				
MISTER FILE							
Airhog							
AC (Air Conditioning)			+ +				
MASTER PH 2 Master Phase Maste							
FEB TPM (Tire Pressure Monitoring)							
The Tire Pressure Monitoring							
MASTER FID PIES MASTER RD PIES							
Lighting Adaptation Unit D.B. Blind Spot Detection							
Master PH 3 Master Red PH							
MASTER 111 B B B B B B B B B				•	•	•	•
MASTER FID 13 MASTER RID PITS MASTER R			•		•		•
Charge Controller			•	•	•	•	•
MASTER FILE MASTER FILE MASTER RED PHS MASTER RED PHS MASTER R			•	•	•	•	0
MASTER 111			•	•	•	•	
Front Camera	MASTER III		•	•	•	•	
Hands=Free Access			•	•	•	•	•
Heater Militimed. Connection Militimed interface Militimed. Interface Militimed interface Militime			•	•	•	•	•
Multimed. Connection			•	•	•	•	•
Multimedia Interface			•		•		•
Parking Assistance			•	•	•	•	•
Parking Prox Can			•	•	•	•	•
Radio Telematic Ctrl Unit Telephone Induction Charger O			•	•	•	•	0
Telephone Induction Charger			•	•	•	•	•
Telephone Induction Charger			•	•	•	•	•
Tracker			•	•	•	•	0
UCH UPC			•	•	•	•	•
Urea Dosing Control Module		UCH	•	•	•	•	•
Naster PH 2 Diesel Injection		UPC	•	•	•	•	•
Diesel Injection		Urea Dosing Control Module	•	•	•	•	•
ABS (Anti-lock Braking System)		Variable P.A.S	•	•	•	•	•
MASTER PH 2 Airbag Interconnection Unit		Diesel Injection	•	•	•	•	•
MASTER PH 2 Engine Immobiliser		ABS (Anti-lock Braking System)	•	•	•	•	•
Engine Immobiliser	MASTER PH 2	Airbag	•	•	•	•	•
Parking Assistance		Engine Immobiliser	•	•	•	•	•
### BECM (Engine Control Module) ### TCM (Transmission Control Module) ### ABS (Anti-lock Braking System) ### Adaptation Unit ### Communications Unit ### Communications Unit ### Parking Assistance ### Piloted Suspension ### Tracker ### UCH ### Diesel Injection ### Airbag ### Engine Immobiliser ### Interconnection Unit ### ECM (Engine Control Module) ### Airbag ### Airbag ### Airbag ### Adaptation Unit ### Interconnection Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Interconnection Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Interconnection Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Interconnection Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Adaptation Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Adaptation Unit ### ECM (Engine Control Module) ### Adaptation Unit ### Adaptation Unit ### ECM (Engine Control Module) ### ECM (Engine Control		Interconnection Unit	•	•	•	•	0
MASTER RWD PH3 MASTER RWD PH3		Parking Assistance	•	•	•	•	•
MASTER RWD PH2 MASTER RWD PH3 ABS (Anti-lock Braking System) Airbag Adaptation Unit Communications Unit Parking Assistance Piloted Suspension Tracker UCH Diesel Injection Airbag Engine Immobiliser Interconnection Unit ECM (Engine Control Module) Airbag Engine Immobiliser Adaptation Unit Interconnection Unit ECM (Engine Control Module) Airbag Engine Immobiliser Adaptation Unit Interconnection Unit ECM (Engine Control Module) ABS (Anti-lock Braking System) Airbag Adaptation Unit Communications Unit Communications		ECM (Engine Control Module)	•	•		•	•
MASTER RWD PH2 MASTER RWD PH3 Airbag			•			•	•
MASTER PH 3 Adaptation Unit • • • • • • • • • • • • • • • • • • •			•		•	•	•
Communications Unit			•		•	•	•
Parking Assistance	MASTER PH 3		•		•	 	
Piloted Suspension			•				-
Tracker					 	_	
MASTER RWD PH2 Diesel Injection							_
Diesel Injection					 	 	
MASTER RWD Airbag Interconnection Unit MASTER RWD PH2 ECM (Engine Control Module) Interconnection Unit MASTER RWD PH2 ECM (Engine Control Module) Interconnection Unit MAGTER RWD PH3 Engine Immobiliser Interconnection Unit MASTER RWD PH3 ECM (Engine Control Module) Interconnection Unit MASTER RWD PH3 Airbag Interconnection Unit MASTER RWD PH3 Airbag Interconnection Unit Airbag Airbag Interconnection Unit Airbag Interconnection Unit Interconnection Unit Communications Unit Interconnection Unit Interconnection Unit		+			 	 	
Engine Immobiliser			-				
Interconnection Unit	MASTER RWD		+ -				
MASTER RWD PH2 ECM (Engine Control Module) Airbag Engine Immobiliser Adaptation Unit Interconnection Unit ECM (Engine Control Module) ABS (Anti-lock Braking System) Airbag Adaptation Unit Communications Unit Communications Unit					_	_	
MASTER RWD PH2	MASTER RWD PH2				 	_	
MASTER RWD PH2 Engine Immobiliser Immobiliser Image: Engine Immobiliser					 	_	
MASTER RWD PH3 Magnetion Unit						 	_
MASTER RWD PH3 Master RWD PH3 ECM (Engine Control Module)		_					
ECM (Engine Control Module)							
ABS (Anti-lock Braking System) Airbag Adaptation Unit Communications Unit		1					_
MASTER RWD PH3 Airbag Adaptation Unit Communications Unit							
Adaptation Unit Communications Unit	MASTER RWD PH3						
Communications Unit				•			
						_	
		UCH		•			•

						_
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag		•	•	•	•
	IC (Instrument Cluster)		•	•	•	•
	AC (Air Conditioning)		•	•	•	•
	Lighting		•	•	•	•
	Discharge Lamp		•	•	•	•
MEGANE II	Communications Unit		•	•	•	0
	Gas Inj		•	•	•	•
	Left Coslad		•	•	•	•
	Parking Assistance		•	•	•	•
	Right Coslad		•	•	•	•
	Sunroof		•	•	•	•
	Tracker		•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S		•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	*
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Lighting	•	•	•	•	•
	Communications Unit	•	•	•	•	0
	Driver's Door	•	•	•	•	•
MEGANE III/	Front Camera	•	•	•	•	•
SCENIC III	Multimedia Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	Passenger's Door	•	•	•	•	•
	Radio	•	•	•	•	•
	Seat Management	•	•	•	•	•
	Sunroof Control Unit	•		•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•		•	•	•
	UPC	•		•		•
	Variable P.A.S					0
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)	-				•
	ABS (Anti-lock Braking System)	-		•		•
	Airbag			•		•
	IC (Instrument Cluster)			•		
						•
	AC (Air Conditioning)					0
	PEB			—		
	Parking Brake		_	_	•	-
	BMS		•	•	•	0
	BMS Safety		•	•	-	0
	4 Wheels Steering	•	•	•	•	•
MEGANE TV	Amplifier		•	•	•	•
MEGANE IV	Front Camera		•	•	•	•
	Front Radar	•	•	•	•	•
	Left-Hand Door	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Radio		•	•	•	•
	Seat Management	•	•	•	•	•
	Supervisor		•	•	•	•
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	4 Wheels Steering	•	•	•	•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Parking Prox Can	•	•	•	•	*
	BMS 12V	•	•	•	•	•
	BMS Safety	•	•	•	•	*
	BMS	-	•	•	•	•
		-		•		•
	UCH					

	UPC	•	•	•	•	•
	EVC	•	•	•	•	*
	BCB	•	•	•	•	*
	Central Gateway	•	•	•	•	•
	Electric Traction Motor	•	•	•	•	•
	Traction Control Unit	•	•	•	•	•
	Brake Booster	•	•	•	•	•
	Check Chassis	•	•	•	•	*
MEGANE IV PH2	Adaptive Driving Beam Left	•	•	•	•	•
	Adaptive Driving Beam Right	•	•	•	•	•
	Adaptive Driving Beam Unit	•	•	•	•	•
	Amplifier	•	•	•	•	*
	Communications Unit	•	•	•	•	•
	Driving Assistance Supervisor	•	•	•	•	*
	Front Camera	•	•	•	•	•
	Front Radar	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Head Up Display	•	•	•	•	•
	Left Rear Side Radar	•	•	•	•	•
	Right Rear Side Radar	•	•	•	•	•
	Left-Hand Door	•	•	•	•	•
	Multimedia Interface	•	•	•	•	*
	Radio	•	•	•	•	•
	Seat Management	•	•	•	•	•
	Supervisor	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	*
	Telephone Induction Charger	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P.A.S	•	•	•	•	*
	Vehicle Sound For Pedestrian	•	•	•	•	•

	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Front Camera	•	•	•	•	•
MEGANE IV SEDAN	Front Radar	•	•	•	•	0
	Left-Hand Door	•		•	•	•
	Multimedia Interface	•		•	•	•
	Parking Prox Can	•		•	•	•
	Radio	•		•	•	•
	Seat Management	•		•	-	0
	Telematic Ctrl Unit	•		•	-	0
	UCH	-		•	-	•
	UPC			•	•	•
	Urea Dosing Control Module		<u> </u>	•	•	
	Variable P. A. S		-	_		
	ECM (Engine Control Module) TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					
			•	•		
	Airbag AC (Air Conditioning)			•		
MEGANE/SCENIC	TPM (Tire Pressure Monitoring)					
	Engine Immobiliser		-			
	Driver's Position		•		•	•
	Gas Inj		•		•	0
	Hood Control		•		•	•
	Interconnection Unit		•		•	
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
MODUS	TPM (Tire Pressure Monitoring)	•	•	•	•	•
	Lighting	•	•	•	•	•
	Hands Free Kit	•	•	•	•	0
	Parking Assistance	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	<u> </u>	•	•	•
	PEB	•	•	•	•	0
	Parking Brake	•	•	•	•	•
	BMS	•		•	•	0
	BMS Safety			•	•	•
	Lighting	•	•	•	•	•
	Amplifier	•	•	•	•	•
NEW SM3/	BCB	•	•	•	•	•
FLUENCE/ MEGANE	Blind Spot Detection	•	•	•	•	•
MEGANE	Communications Unit	•	•	•	•	•
	Driver's Door	•	•	•	•	•
	EVC	•	•	•	•	•
	Multimed. Connection		•	•	•	•
	Multimedia Interface		•	•	•	0
	Parking Prox Can			•		0
	Radio	•	•	•	•	•
	Sunroof Control Unit	•		•	•	•
	Telematic Ctrl Unit		•	•		•
	Tracker		<u> </u>	•	•	
	UCH	•		•	•	_
	LIDC		_			•
	UPC Variable P.A.S	•	•	•	•	•

	Petrol Injection	•	•	•	•	•
R19	TCM (Transmission Control Module)		-		—	
	ABS (Anti-lock Braking System)					
R21/SAVANNA	Engine Immobiliser					
R25	Petrol Injection Petrol Injection					
N20	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)					0
	Airbag			•		•
SAFRANE	IC (Instrument Cluster)			•		•
	AC (Air Conditioning)			•		
	Engine Immobiliser					
	Discharge Lamp					
	Variable P. A. S					0
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)					
	ABS (Anti-lock Braking System)		-			
	Airbag			•		
SANDERO						
	Gas Inj Radio					
	Tracker					
	UCH					
						0
	Variable P.A.S		-			
	ECM (Engine Control Module)					
	TCM (Transmission Control Module)		_	•		
	ABS (Anti-lock Braking System)	•	•	•	-	•
	Airbag			•	-	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	-	•
	Engine Immobiliser	•	•	•	•	•
SCENIC II	Discharge Lamp	•	•	•	•	•
	Communications Unit	•	•	•	•	•
	Gas Inj	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Assistance	•	•	•	•	0
	Parking Prox Can	•	•	•	•	•
	Radio	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•		
	ABS (Anti-lock Braking System)					
			•	•	•	•
	Airbag	•	•	•	•	•
	Airbag IC (Instrument Cluster)	•			•	•
	IC (Instrument Cluster)	•	•	•		ě
		•	•	•		•
	IC (Instrument Cluster) AC (Air Conditioning) PEB	•	•	•		•
	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake	•	•	•	•	•
	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS		•	•	•	0
	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety	•	•	•		
	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier	•	•	•		0
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera	0	•			
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar	•	•	•	•	
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door	•	• • • • • • • • • • • • • • • • • • •			
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can	•				
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door Seat Management					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door Seat Management Supervisor					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door Seat Management Supervisor Telematic Ctrl Unit					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door Seat Management Supervisor Telematic Ctrl Unit UCH					
SCENIC IV	IC (Instrument Cluster) AC (Air Conditioning) PEB Parking Brake BMS BMS Safety Amplifier Front Camera Front Radar Left-Hand Door Multimedia Interface Parking Prox Can Radio Right-Hand Door Seat Management Supervisor Telematic Ctrl Unit					

						
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	
	Parking Brake	•	•			•
				•		
	Lighting		_	— -		_
	Amplifier		•	•	•	•
	Blind Spot Detection	•	•	•	•	0
	Communications Unit	•	•	•	•	•
SM7 - L47	Driver's Door	•	•	•	•	•
	Left-Hand Door	•	•	•	•	•
	Multimed. Connection	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	
	Passenger's Door	•		•		•
		•		•		•
	Radio					
	Right-Hand Door	•	•	•	•	•
	Seat Management	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P.A.S	•	•	•	•	0
	Petrol Injection	•	•	•	•	•
SPIDER	Airbag	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
SUPER 5	Petrol Injection	•		•	•	•
DOLLIN U						
	ECM (Engine Control Module)		_	<u> </u>	 	
	TCM (Transmission Control Module)		•	•	•	•
	ABS (Anti-lock Braking System)		•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	4 Wheels Steering	•	•	•	•	•
	Amplifier			•		•
				<u> </u>		_
	Front Camera		_	•	•	•
	Front Radar		•	•	•	•
TALISMAN/SM6	Left-Hand Door	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	•	•
	Piloted Suspension	•	•	•	•	0
	Power Back Door	•	•	•	•	•
	Radio	•	•	•	•	
	Seat Management			•		0
	Telematic Ctrl Unit			-	•	•
	UCH		•	•	•	•
	UPC	_				
			•	•	•	•
	Urea Dosing Control Module	•	•		•	•
	Urea Dosing Control Module Variable P.A.S	•	•		•	•
		•	_		•	_
	Variable P.A.S ECM (Engine Control Module)		•	•	•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module)	•	•	•	•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering	•	•	•	•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System)	•	•	0	•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System)	•	•		•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster)	•	•	0	•	
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System)	•	•		•	•
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster)	•	•		•	
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning)	•	•		•	
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH	•	•		•	
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC	•	•			
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis	0				
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left	0				
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right					
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit					
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier					
	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit					
TALISMAN/SM6 PH9	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Radar Hands-Free Module Head Up Display					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar Right Rear Side Radar Left-Hand Door					
TALISMAN/SM6 PH2	Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module) 4 Wheels Steering ABS (Anti-Lock Braking System) SRS (Supplemental Inflatable Restraint System) IC (Instrument Cluster) AC (Air Conditioning) UCH UPC Central Gateway Check Chassis Adaptive Driving Beam Left Adaptive Driving Beam Right Adaptive Driving Beam Unit Amplifier Communications Unit Driving Assistance Supervisor Front Camera Front Radar Hands-Free Module Head Up Display Left Rear Side Radar Right Rear Side Radar Right Rear Side Radar Left-Hand Door Power Back Door					

	Radio	•	•	•	•	•
	Seat Management	•	•	•	•	*
	Telematic Control Unit	•	•	•	•	•
	Telephone Induction Charger	•	•	•	•	•
	Urea Dosing Control Module	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
THALIA/SYMB.2	Airbag	•	•	•	•	•
THRETH, STMD. 2	AC (Air Conditioning)	•	•	•	•	•
	Tracker	•	•	•	•	0
	UCH	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
THALIA/SYMBL	Airbag	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Engine Immobiliser	•	•	•	•	•
	Interconnection Unit	•	•	•	•	0

	1	1	1	1	1	
	Diesel Injection	•	•	•	•	•
TRAFIC	Petrol Injection	•	•	•	•	•
	Airbag	•	•	•	•	•
	Engine Immobiliser	•	•	•		•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)		•	•		
	ABS (Anti-lock Braking System)			•		0
TRAFIC II	Airbag Engine Immobiliser					
	Adaptation Unit					
	Heater		•	•		
	Interconnection Unit	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
TRAFIC II P2/3	Adaptation Unit	•	•	•	•	0
	Communications Unit	•	•	•	•	0
	Heater	•	•	•	-	•
	Multimed. Connection		•	•		•
	Multimedia Interface					
	Parking Assistance Radio					
	UCH					
	ECM (Engine Control Module)	•	•		•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•		•	•	
	Adaptation Unit	•	•	•	•	•
	Communications Unit	•	•	•	•	0
TRAFIC III	Hands Free Kit	•	•	•	•	•
	Heater	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Parking Prox Can	•	•	•	-	•
	Radio		•	•		0
	Telematic Ctrl Unit UCH					
	UPC					
	Urea Dosing Control Module	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
TRIBER	AC (Air Conditioning)	•	•	•	•	0
	UCH	•	•	•	•	•
	Central Gateway	•	•	•	•	*
	Communications Unit					•
		_	•			
	Hands-Free Module	•	•	•		*
	Hands-Free Module Radio	•	•	•	•	*
	Hands-Free Module Radio Variable P. A. S	•	•	•	•	*
	Hands-Free Module Radio Variable P.A.S Petrol Injection	•	•	•	•	*
	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module)	•	•	•	•	* * *
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System)	•	•	0	•	*
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module)	•	•	•	•	** * * ** * ** ** ** ** ** ** ** ** ** ** ** ** ** ** ** ** ** ** ** **
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag	0	•	•		** ** ** ** ** ** ** ** ** ** ** ** **
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser	•	•			***************************************
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit	•	•			** ** ** ** ** ** ** ** ** ** ** ** **
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P.A.S	•				* * * * * * * * * * * * * * * * * * *
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P.A.S ECM (Engine Control Module)	•				* * * * * * * * * * * * * * * * * * *
TWINGO	Hands-Free Module Radio Variable P.A.S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P.A.S ECM (Engine Control Module) TCM (Transmission Control Module)	•				* * * * * * * * * * * * * * * * * * *
TWINGO	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System)	•				* * * * * * * * * * * * * * * * * * *
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning)	•				** ** ** ** ** ** ** ** ** **
TWINGO	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection	0				** ** ** ** ** ** ** ** ** **
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection Multimedia Interface	•				** ** ** ** ** ** ** ** ** **
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection Multimedia Interface Parking Assistance	0				** ** ** ** ** ** ** ** ** **
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection Multimedia Interface Parking Assistance Radio	0				** ** ** ** ** ** ** ** ** **
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection Multimedia Interface Parking Assistance Radio Rev Counter/Symbol	0				
	Hands-Free Module Radio Variable P. A. S Petrol Injection TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag Engine Immobiliser Interconnection Unit Variable P. A. S ECM (Engine Control Module) TCM (Transmission Control Module) ABS (Anti-lock Braking System) Airbag IC (Instrument Cluster) AC (Air Conditioning) Multimed. Connection Multimedia Interface Parking Assistance Radio	0				** ** ** ** ** ** ** ** ** **

	T /		_			
	ECM (Engine Control Module)	-		•	-	
	TCM (Transmission Control Module)	•	•	•	•	-
	ABS (Anti-lock Braking System)	•	•	•	•	-
	Airbag	•	•	•	•	
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Adaptation Unit	•	•	•	•	•
	Communications Unit	•	•	•	•	0
TWINGO III	Front Camera	•	•	•	•	0
	Front Radar	•	•	•	•	0
	Gearbox Elec Control	•	•	•	•	•
	Multimedia Interface	•	•	•	•	•
	Radio	•	•	•	•	0
	Telematic Ctrl Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	UPC	•	•	•	•	•
	Variable P. A. S					•
	ECM (Engine Control Module)		•			
	TCM (Transmission Control Module)					
			•	•		
	ABS (Anti-lock Braking System)		-			
TWINGO PHASE 2	Airbag				<u> </u>	
	Engine Immobiliser		•		•	-
	Gas Inj	•		•	•	
	Interconnection Unit	•	•	•	•	0
	Variable P. A. S	•	•	•	•	0
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
TWIZY	BMS	•	•	•	•	•
	Adaptation Unit	•	•	•	•	•
	UCH	•	•	•	•	•
	ECM (Engine Control Module)	•	•	•	•	•
	TCM (Transmission Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	Parking Brake	•		•	•	•
VEL SATIS	TPM (Tire Pressure Monitoring)	•		•	•	•
	Discharge Lamp			•		•
	Front Radar					
	Hands Free Kit			•		0
						0
	Heater				-	
	Parking Assistance	-		•	-	-
	UCH	•	•			
	ECM (Engine Control Module)	•	•	•	•	
	TCM (Transmission Control Module)	•	•	•	•	
	ABS (Anti-lock Braking System)	•	•	•	•	•
	Airbag	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
VEL SATIS PH2	Parking Brake	•	•	•	•	•
TEL OMITO THE	Lighting	•	•	•	•	0
	Communications Unit	•	•	•	•	•
	Hands Free Kit	•	•	•	•	0
	Heater	•	•	•	•	•
	Parking Assistance	•	•	•	•	•
	Parking Prox	•	•	•	•	0
1	UCH		•	•		•
	OOH					<u> </u>

	ECM (Engine Control Module)	•	•	•	•	•
	ABS (Anti-lock Braking System)					
	Airbag					
	IC (Instrument Cluster)					
WIND	AC (Air Conditioning)					
WIND	Multimed. Connection				1 -	
	Multimedia Interface				1 -	
	Radio	•				
	Sunroof Control Unit	_			-	0
	UCH	_			-	
	Variable P. A. S			•		0
	ABS (Anti-lock Braking System)			•		•
	Airbag	•	•	•		•
	IC (Instrument Cluster)	•	•	•		•
	AC (Air Conditioning)	•	•	•	+	0
	PEB	•	•	•		0
	BMS	•	•	•	•	0
	Adaptation Unit	•	-	•	•	•
ZOD	BCB	•	-	•	•	•
ZOE	Communications Unit	•	•	•	•	•
	EVC	•	•	•	•	<u> </u>
	Multimedia Interface	•	•	•		•
	Parking Prox Can	•	•	•	•	0
	Radio	•	•	•	•	•
	Radio Telematic Ctrl Unit	•	•	•		
	UCH	•	•	•	•	•
	UPC	•	•	•		•
	Variable P.A.S	•	•	•	•	•
	ABS (Anti-Lock Braking System)	•	•	•	•	•
	SRS (Supplemental Inflatable Restraint System)	•	•	•	•	•
	IC (Instrument Cluster)	•	•	•	•	•
	AC (Air Conditioning)	•	•	•	•	•
	BMS Safety	•	•	•	•	•
	BMS	•	•	•	•	•
	Parking Brake	•	•	•	•	•
	Parking Prox Can	•	•	•	•	0
	UCH	•	•	•	•	•
	UPC	•	•	•	•	0
	BCB	•	•	•	•	•
	EVC	•	•	•	•	•
	PEB	•	•	•	•	•
NEW ZOE	Central Gateway	•	•	•	•	•
	Check Chassis	•	•	•	•	0
	Brake Booster	•	•	•	•	0
	Adaptation Unit	•	•	•	•	•
	Amplifier	•	•	•	•	•
	Front Camera	•	•	•	•	•
	Front Radar	•	•	•	•	•
	Hands-Free Module	•	•	•	•	•
	Multimedia Interface	•	•	•	•	0
	Power Line Controller	•	•	•	•	•
	Telematic Control Unit	•	•	•	•	•
	Telephone Induction Charger	•	•	•	•	•
	Variable P. A. S	•	•	•	•	•
1	Vehicle Sound For Pedestrian	•		•	•	